

Work instruction: How to install new software

 
1) Download the latest software from the Daikin extranet
[Software downloads/service software/network solutions/Icontroller](#)

(Click the real to demo software icon within the table)


2) Unzip the software to a PCMCIA card. Make sure that the PCMCIA card only contains the following files: Install, exe.bin.gz, Installer.dat
These files need to be placed in the root directory of the PCMCIA card (e.g.: H:\)

3) Insert PCMCIA card into the PCMCIA card slot
(Nameplate of PCMCIA card should be pointing to the back of ITC)


4) Press the reset button for 3 seconds. After the ITC is reset, follow the installation instructions that appear on screen.

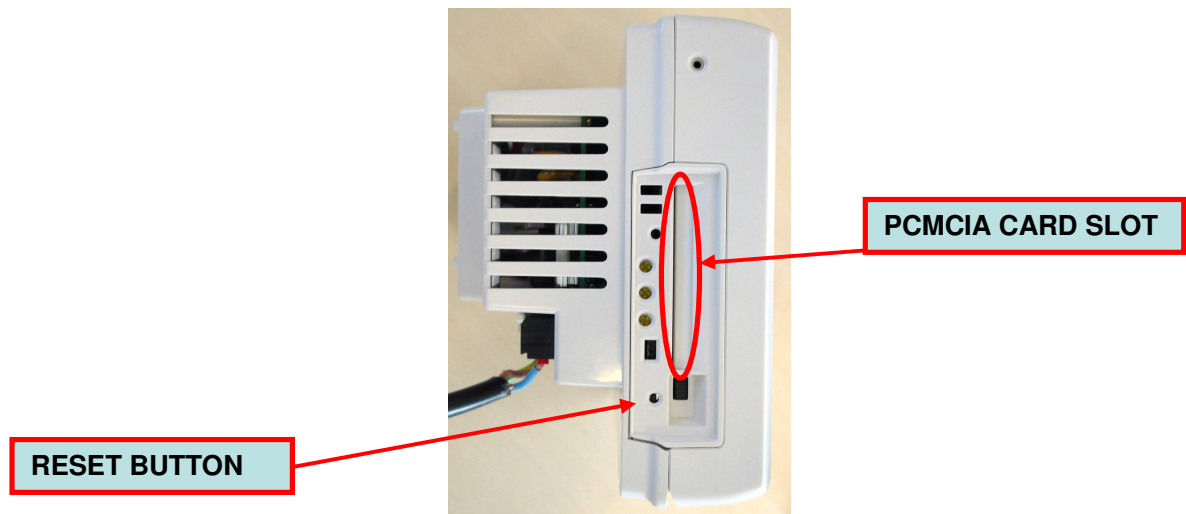

 5) Press the screen to start the version-up information

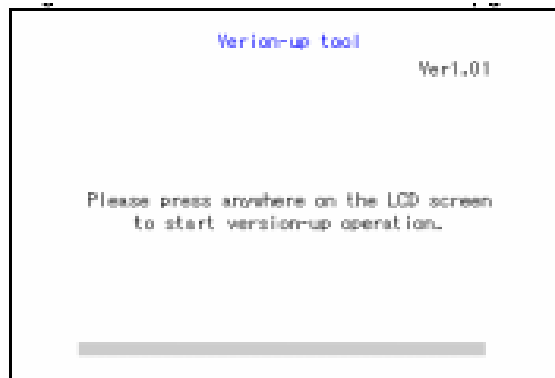

 6) Touch the (+) marks to calibrate the touch panel

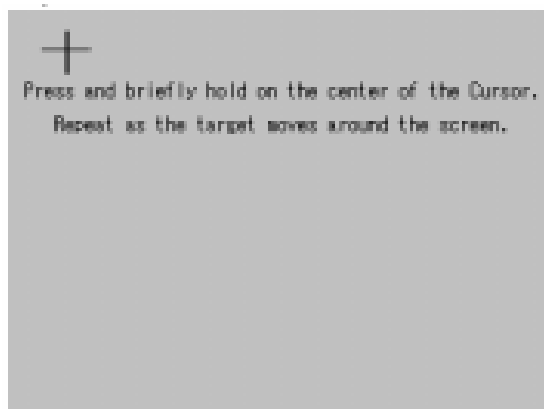

7) Touch the "OK" button to start the software upgrade.



- 8) When software is successful installed the following screen will appear.
Remove the PCMCIA card and press the "restart" button

