




# INSTALLATION MANUAL

## Additional one-row heat exchanger

English language: Original Instructions  
All other language: Translation of the Original Instruction

**ESRH02A6**  
**ESRH03A6**  
**ESRH06A6**  
**ESRH10A6**

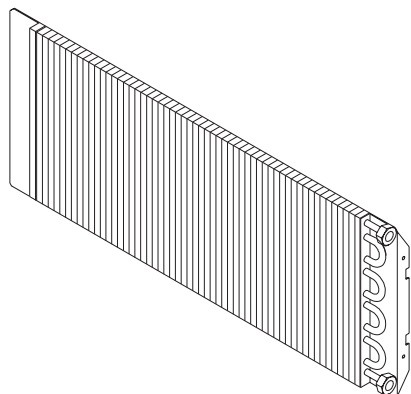

Installation manual  
Additional one-row heat exchanger

English

Installationsanleitung  
Zusätzlicher einreihiger Wärmetauscher

Deutsch

Manuel d'installation  
Batterie additionnelle à un rang




Français

Manual de instalación  
Intercambiador de calor adicional de una etapa

Español

Manuale d'installazione  
Scambiatore di calore a fila singola supplementare

Italiano

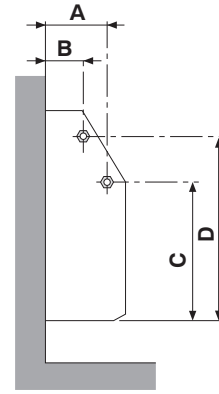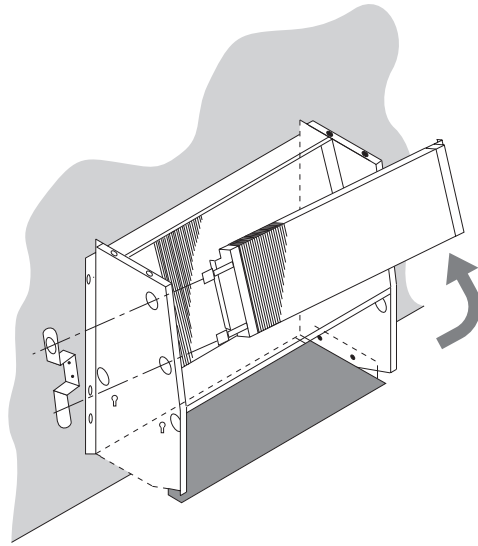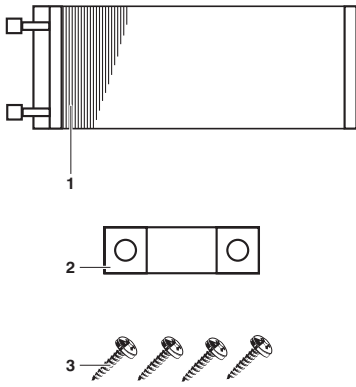

		A	B	C	D	Ø
<b>FW 01+15+02+25</b>	ESRH02A6	187	99	334	486	1/2"
<b>FW 03+35</b>	ESRH03A6	187	99	334	486	1/2"
<b>FW 04+06</b>	ESRH06A6	187	99	334	486	1/2"
<b>FW 08+10</b>	ESRH10A6	195	120	348	479	1/2"

1

2

3

## NOTES

