


OPERATION MANUAL

Before using your air conditioner, please read this operating manual carefully and keep it for future reference.

Part No.: R08019028856
OM-SLM-0906-DAIKIN

SLM Controller Indication

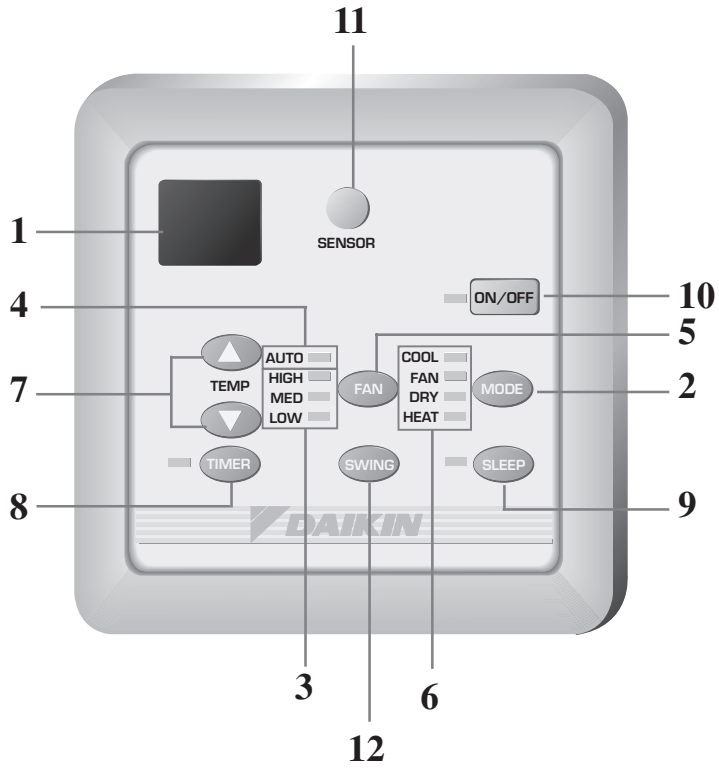

OPERATING INSTRUCTION

1. **TEMPERATURE (Seven Segments)**
 - To indicate the ambient temperature set by the user.
2. **MODE**
 - To indicate the selected operating mode: HEAT & DRY / COOL / FAN (LED green / yellow / red).
3. **VENTILATION SPEED**
 - To indicate the selected ventilation speed: LOW / MED / HIGH
 - For U1-SB125 only have single speed: HIGH.
4. **AUTO SELECTION**
 - Automatic selection for speed, whereby the speed is automatically adjusted according to the room temperature.
5. **FAN AND VENTILATION MODE**
 - Press the fan button to set the desired selection.
6. **OPERATION SELECTION MODE**
 - Press the mode button to select the type of operation mode.
 - Cooling unit: COOL, DRY, FAN.
 - Heat pump unit: AUTO, COOL, DRY, FAN, HEAT.
7. **TEMPERATURE SETTING**
 - Set the desired temperature.
 - Press ▲ or ▼ button to increase or decrease the set temperature. The setting range is between 16°C to 30°C (60°F to 80°F).
8. **TIMER SWITCH SETTING**
 - Press the set button to activate the switch timer of the air conditioner unit (the setting range is between 1 to 10 hours). The unit will be at ON or OFF state in function of operating mode.
9. **“SLEEP” FUNCTION**
 - Press the sleep button to select the sleep function. This function cannot be selected if the air conditioner unit is operating under FAN mode only or dry mode. For SLEEP function operating under COOL mode, the setting temperature increases to 0.5°C after 30 minutes, 1°C after 1 hour and 2°C after 2 hours.
10. **“ON/OFF” SWITCH**
 - Press once, the air conditioner unit starts.
 - Press again, the air conditioner unit stops.
11. **IR RECEIVER**
12. **AUTOMATIC AIR SWING (OPTIONAL)**
 - Press the **SWING** button to activate the automatic air swing function.
 - To distribute the air to a specific direction, press the button and wait until the louver move to the desired direction and press the **SWING** button once again.

Error	Seven Segments
Room Sensor missing/Short	E1 blinking
Indoor coil sensor missing/Short	E2 blinking
Outdoor coil sensor missing/Short	E3 blinking
Compressor overload	E4 blinking
Outdoor abnormal compressor overload trip or gas leak	E5 blinking
Pump fault	E6 blinking

MEMO

MEMO

- In the event that there is any conflict in the interpretation of this manual and any translation of the same in any language, the English version of this manual shall prevail.
- The manufacturer reserves the right to revise any of the specification and design contain herein at any time without prior notification.

OYL MANUFACTURING COMPANY SDN. BHD.

LOT 60334, PERSIARAN RAHMAN PUTRA 3, TAMAN PERINDUSTRIAN BUKIT RAHMAN PUTRA,
47000 SUNGAI BULOH, SELANGOR DARUL EHSAN MALAYSIA.