
## FXDO40.50NB

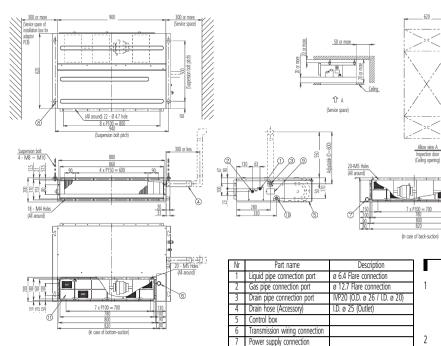

Suspension bracket

Air filter (Accessory)

Inspection door

Socket for drain

		_	-	_

- In case of back-suction, mount chamber cover to bottom side of the unit.
  - In case of bottom-suction, mount chamber cover to back side of the unit.
- 2 Location of unit's name plate: control box cover.
- Mount the air filter at the suction side.
  (Select its color (gravity method) 50% or more).
  It can not be equipped with air filter (accessory) when connecting duct to suction side.