

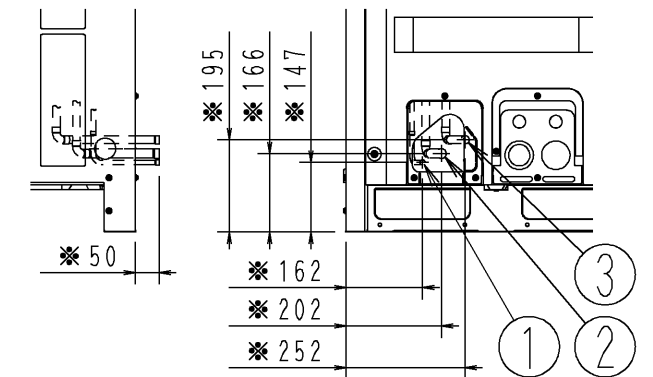
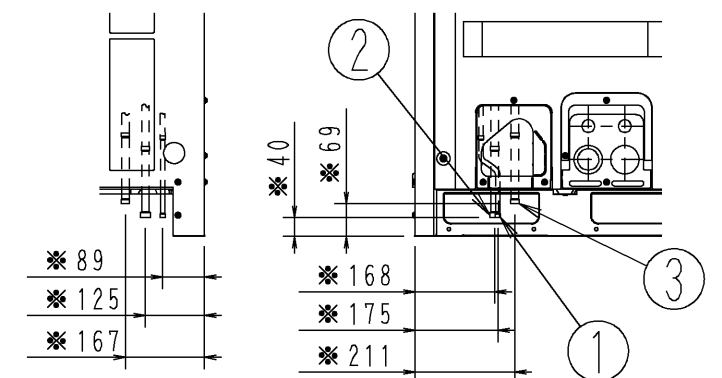
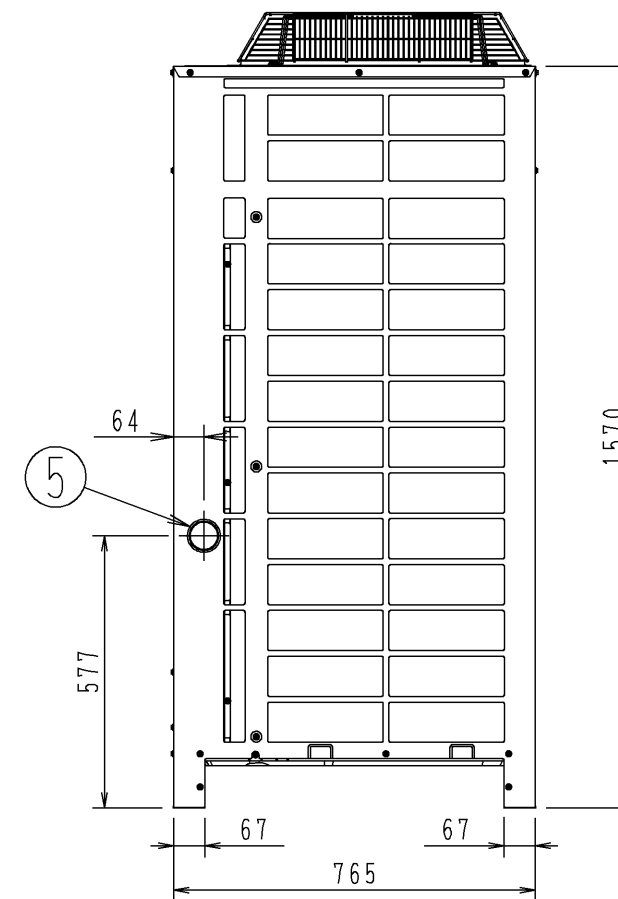



- Notes) 1. * shows the dimensions after fixing the accessory pipes.
 2. For piping connection method (front and bottom sides) see the installation manual.
 3. Suction gas pipe
 φ15.9 Brazing connection...RQEQ140PY1
 φ19.1 Brazing connection...RQEQ180, 212PY1
 HP/LP gas pipe
 φ12.7 Brazing connection...RQEQ140PY1
 φ15.9 Brazing connection...RQEQ180, 212PY1

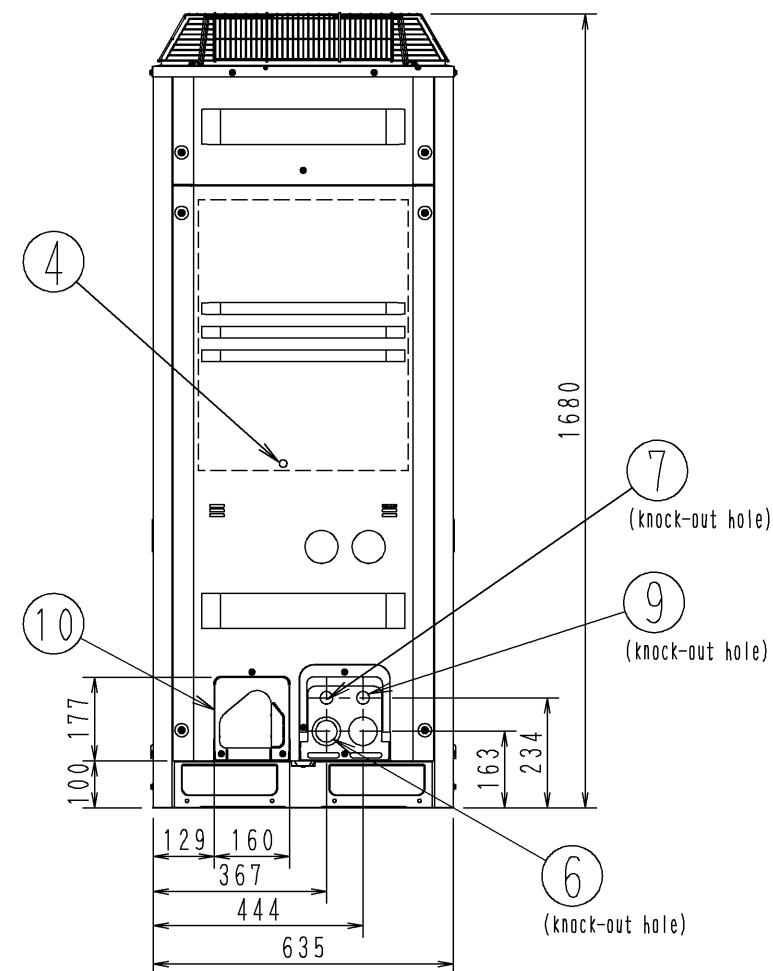

〔DETAIL FOR FRONT SIDE〕

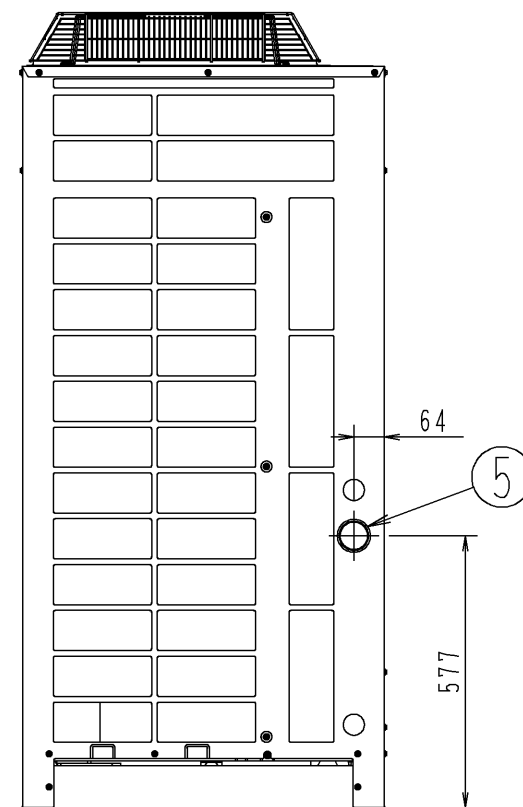

〔DETAIL FOR BOTTOM SIDE〕

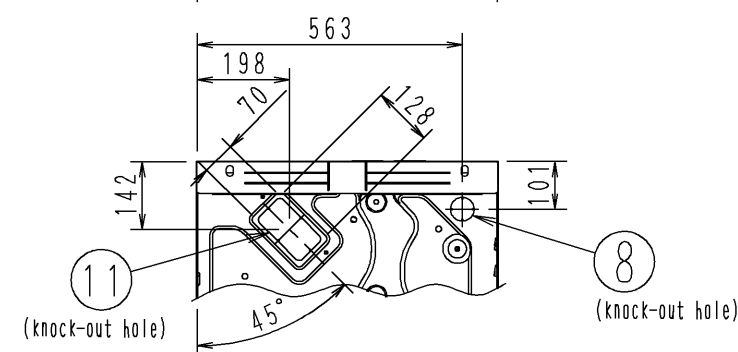

3	High and low pressure gas pipe connection port	See note 3.	1 1	Pipe routing hole(bottom)	See note 2.
2	Suction gas pipe connection port	See note 3.	1 O	Pipe routing hole(front)	See note 2.
1	Liquid pipe connection port	φ9.5 Brazing connection	9	Wire routing hole(front)	φ27
No.	Parts name	Remarks	8	Power cord routing hole(bottom)	φ50
			7	Power cord routing hole(front)	φ27
			6	Power cord routing hole(front)	φ45
			5	Power cord routing hole(side)	φ62
			4	Grounding terminal	Inside of switch box(M8)
			No.	Parts name	Remarks