

# DUCT TYPE AIR CONDITIONER

# INSTRUCTION MANUAL

HDU-24H03/H

HDU-28H03/H

HDU-42H03/H

No. 0010571721

- Please read this manual carefully before using

# TABLE OF CONTENTS

---

CAUTIONS .....	2
SAFETY PRECAUTIONS .....	3-5
PARTS AND FUNCTIONS .....	6-8
OPERATION .....	9-14
MALFUNCTION .....	15-16
CARE AND MAINTENANCE .....	17
FOR PREPARATION OF HEATING .....	18
IS THE UNIT INSTALLED CORRECTLY .....	19
INSTALLATION MANUAL FOR WIRE CONTROLLER .....	20-21
INSTALLATION MANUAL FOR OUTDOOR UNIT .....	22-26
INSTALLATION MANUAL FOR INDOOR UNIT .....	27-35
OTHER INSTRUCTION AND TEST RUN .....	36

---

# ■ CAUTIONS

## *Disposal of the old air conditioner*

Before disposing an old air conditioner that goes out of use, please make sure it's inoperative and safe. Unplug the air conditioner in order to avoid the risk of child entrapment.

It must be noticed that air conditioner system contains refrigerants, which require specialized waste disposal. The valuable materials contained in a air conditioner can be recycled. Contact your local waste disposal center for proper disposal of an old air conditioner and contact your local authority or your dealer if you have any question. Please ensure that the pipework of your air conditioner does not get damaged prior to being picked up by the relevant waste disposal center, and contribute to environmental awareness by insisting on an appropriate, anti-pollution method of disposal.

## *Disposal of the packaging of your new air conditioner*

All the packaging materials employed in the package of your new air conditioner may be disposed without any danger to the environment.

The cardboard box may be broken or cut into smaller pieces and given to a waste paper disposal service. The wrapping bag made of polyethylene and the polyethylene foam pads contain no fluorochloric hydrocarbon.

All these valuable materials may be taken to a waste collecting center and used again after adequate recycling.

Consult your local authorities for the name and address of the waste materials collecting centers and waste paper disposal services nearest to your house.

## *Safety Instructions and Warnings*

Before starting the air conditioner, read the information given in the User's Guide carefully. The User's Guide contains very

important observations relating to the assembly, operation and maintenance of the air conditioner.

The manufacturer does not accept responsibility for any damages that may arise due to non-observation of the following instruction.

- Damaged air conditioners are not to be put into operation. In case of doubt, consult your supplier.
- Use of the air conditioner is to be carried out in strict compliance with the relative instructions set forth in the User's Guide.
- Installation shall be done by professional people, don't install unit by yourself.
- For the purpose of safety, the air conditioner must be properly grounded in accordance with specifications.
- Always remember to unplug the air conditioner before opening inlet grill. Never unplug your air conditioner by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.
- All electrical repairs must be carried out by qualified electricians. Inadequate repairs may result in a major source of danger for the user of the air conditioner.
- Do not damage any parts of the air conditioner that carry refrigerant by piercing or perforating the air conditioner's tubes with sharp or pointed items, crushing or twisting any tubes, or scraping the coatings off the surfaces. If the refrigerant spurts out and gets into eyes, it may result in serious eye injuries.
- Do not obstruct or cover the ventilation grille of the air conditioner. Do not put fingers or any other things into the inlet/outlet and swing louver.
- Do not allow children to play with the air conditioner. In no case should children be allowed to sit on the outdoor unit.

# SAFETY PRECAUTIONS

- Before starting to use the system, read carefully this "SAFETY PRECAUTIONS" to ensure a proper operation of the system.
- Safety precautions described here are classified to "⚠ WARNING" and "⚠ CAUTION". Precautions which are shown in the column of "⚠ WARNING" means that an improper handling could lead to a grave result like a death, serious injury, etc. However, even if precautions are shown in the column of "⚠ CAUTION", a very serious problem could occur depending on situation. Make sure to observe these safety precautions faithfully because they are very important information to ensure the safety.
- Symbols which appear frequently in the text have following meanings.

	Strictly prohibited.		Observe instructions faithfully.		Provide a positive grounding.
---	----------------------	---	----------------------------------	---	-------------------------------

- When you have read through the manual, keep it always at hand for read consultation. If the operator is replaced, make sure to hand over this manual to the new operator.

## CAUTIONS FOR INSTALLATION

### ⚠ WARNING

The system should be applied to places as office, restaurant, residence and the like. The system should be installed by your dealer or a professional installer.



Application to inferior environment such as an engineering shop, could cause equipment malfunction and serious injury or death.



Installation by yourself is not encouraged because it could cause such problems as water leakage, electrical shock or fire accident by some improper handling.



When you need some optional devices such as a humidifier, electric heater, etc. to use the product which are recommended by us. These devices should be attached by a professional installer.



Installation by yourself is not encouraged because it could cause such problems as water leakage, electrical shock or fire accident by some improper handling.

### ⚠ CAUTION

Do not install nearby the place where may have leakage of flammable gas.




If the gas leaks and gathers around, it may cause the fire.



Depending on the place of installation, circuit breaker may be necessary.

Unless the circuit breaker is installed, it could cause electrical shocks.



Drain pipe should be arranged to provide a positive draining.



If the pipe is arranged improperly, furniture or the likes may be damaged by leaked water.



Where strong winds may prevail, the system should be fixed securely to prevent a collapse.



Bodily injury could result by a collapse.



Install on the place where can endure the weight of air conditioner.

Bodily injury could result by a careless installation.



Make sure the system is grounded.



Grounding cable should never be connected to a gas pipe, city water pipe, lightning conductor rod or grounding cable of telephone. If the grounding cable is not set properly, it could cause electric shocks.



## CAUTIONS FOR OPERATION

### ⚠ WARNING

You should refrain from exposing your body directly to cool wind for a long time.



It could affect your physical condition or cause some health problems.



Do not poke the air inlet or outlet with bar, etc.

Since the internal fan is operating with a high speed, it could cause an injury.



When any abnormal condition (scorching smell or others) is found, stop the operation immediately and turn off the power switch. Then consult your dealer.

If you continue the operation without removing the cause, it could result in a trouble, electric shock or fire.



### ⚠ CAUTION

The system should never be used for any other purposes than intended such as for preservation of food, flora and fauna, precision devices or work of art.




It could cause deterioration of food or other problems.



It could cause electric shocks.




Incomplete combustion could occur on the apparatus.

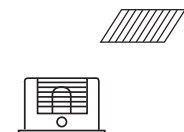

# SAFETY PRECAUTIONS

## ⚠ CAUTION

Do not wash the air conditioner with water.



It could cause electric shocks.

Do not install the stand so that the outlet reaches directly the floor and fans.



It will not be good for their health.

Make sure to use a fuse of proper electric rating.



Use of steel or copper wire in place of a fuse is strictly prohibited because it could result in a trouble or fire accident.

Neither stand on the air conditioner nor place something on it.




There are risks of falling or injury by collapsed object.

It is strictly prohibited to place a container of combustible gas or liquid near the air conditioner or to spray it directly with the gas or liquid.




It could cause a fire accident.

Do not operate the system while the air outlet grill is removed.



There is a risk of injury.

Do not use the power switch to turn on or off the system.



It could cause a fire or water leakage.

Do not touch the air outlet section while the swing louver is operating.



There is a risk of injury.

Do not use such equipment as a water heater, etc. around the indoor unit or the wire controller.




If the system is operated at the vicinity of such equipment which generates steam, condensed water may drip during cooling operation or it could cause a fault current or short-circuit.

When operating the system simultaneously with a combustion apparatus, indoor air must be ventilated frequently.




Insufficient ventilation could cause an oxygen deficiency accident.

Check occasionally the support structure of the unit for any damage after a use of long period of time.

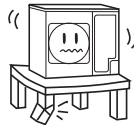

If the structure is not repaired immediately, the unit could topple down to cause a personal injury.

Do not place any objects on or climb on the unit.

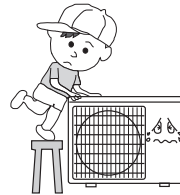

When cleaning the system, stop the operation and turn off the power switch.




Cleaning should never be done while the internal fans are running with high speed.

Do not put water containers on the unit such as a flower vase, etc.



If the structure is not repaired immediately, the unit could topple down to cause a personal injury.



## CAUTIONS FOR TRANSFER OR REPAIR

## ⚠ WARNING

Modification of the system is strictly prohibited. When the system needs a repair, consult your dealer.



Improper practice of repair could cause water leakage, electric shock or fire.



When the air conditioner is relocated, contact your dealer or a professional installer.

Improper practice of installation could cause water leakage, electric shock or fire.

# ■ SAFETY PRECAUTION

The machine is adaptive in following situation


1. Applicable ambient temperature range:

Cooling	Indoor	Maximum: D.B / W.B Minimum: D.B / W.B	32°C / 23°C 18°C / 14°C
	Outdoor	Maximum: D.B / W.B Minimum: D.B	43°C / 26°C 15°C
Heating	Indoor	Maximum: D.B Minimum: D.B	27°C 15°C
	Outdoor	Maximum: D.B / W.B Minimum: D.B / W.B	24°C / 18°C -7°C / -8°C



2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person.
3. If the fuse on PC board is broken please change it with the type of T. 3.15A /250V.
4. The wiring method should be in line with the local wiring standard.
5. The power cable and connecting cable are self-provided. The power cable should be H07RN-F 5G2.5mm<sup>2</sup> (for HDU-42H03/H) or H07RN-F 3G4.0mm<sup>2</sup> (for HDU-24H03/H, HDU-28H03/H). The connecting cable should be H05RN-F 4G0.75mm<sup>2</sup>.  
All the cables shall have got the European authentication certificate. During installation, when the connecting cables break off, it must be assured that the grounding wire is the last one to be broken off.
6. The breaker of the air conditioner should be all-pole switch; and the distance between its two contacts should be no less 3mm.
7. The indoor unit installation height is at least 2.5m.

# ■ PARTS AND FUNCTIONS

## Indoor Unit

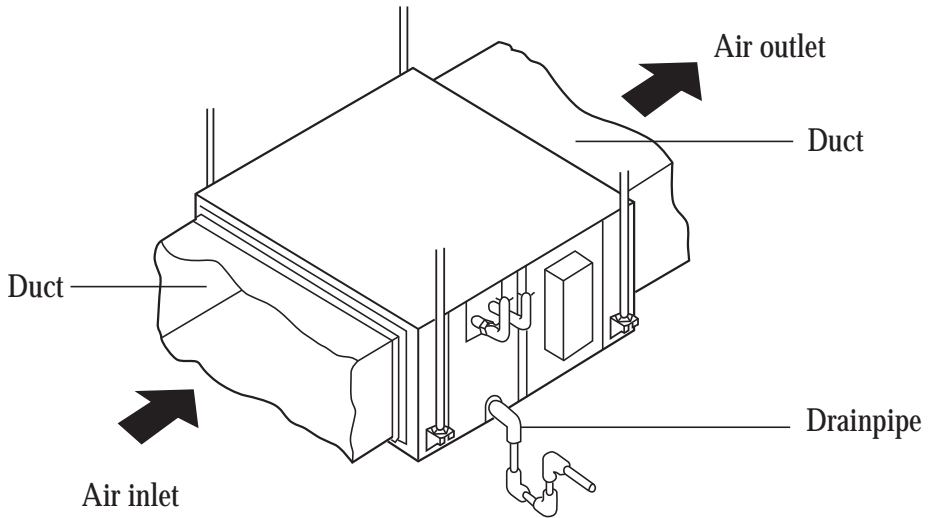

## Outdoor Unit

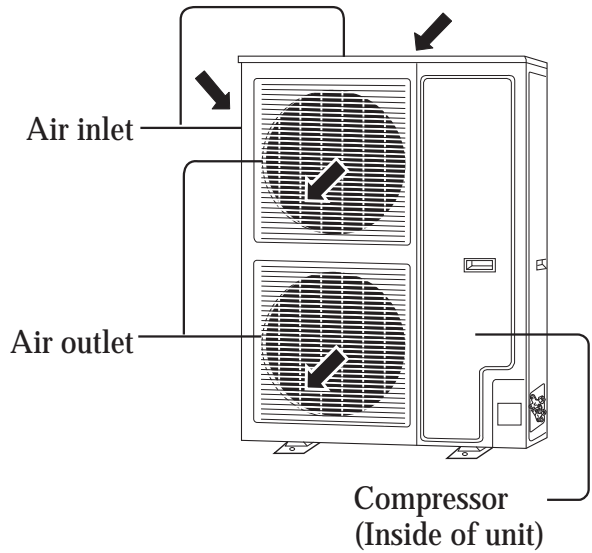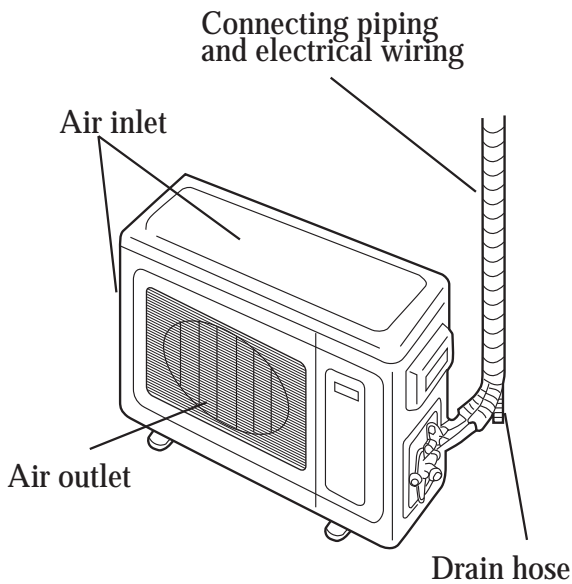


HDU-24H03/H  
HDU-28H03/H

HDU-42H03/H

# ■ PARTS AND FUNCTIONS

## Operation

Buttons and display of the wire controller.

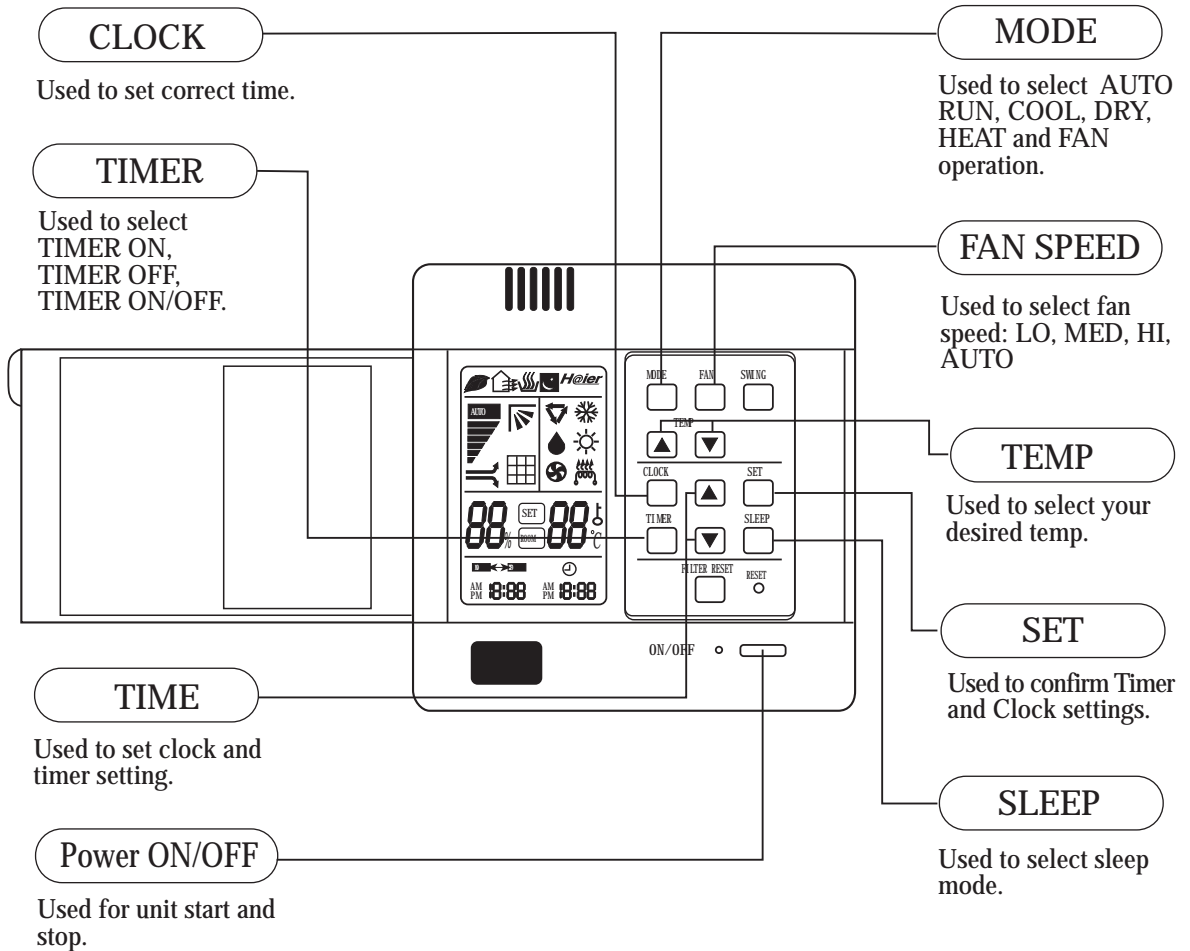

**Cautions:**  
On cooling only unit, heating mode is not available.


**Note:**  
The above information is the explanation of the displayed information therefore varies with those displayed in actual operation.



# ■ PARTS AND FUNCTIONS

## Operation

Buttons and display of the wire controller.

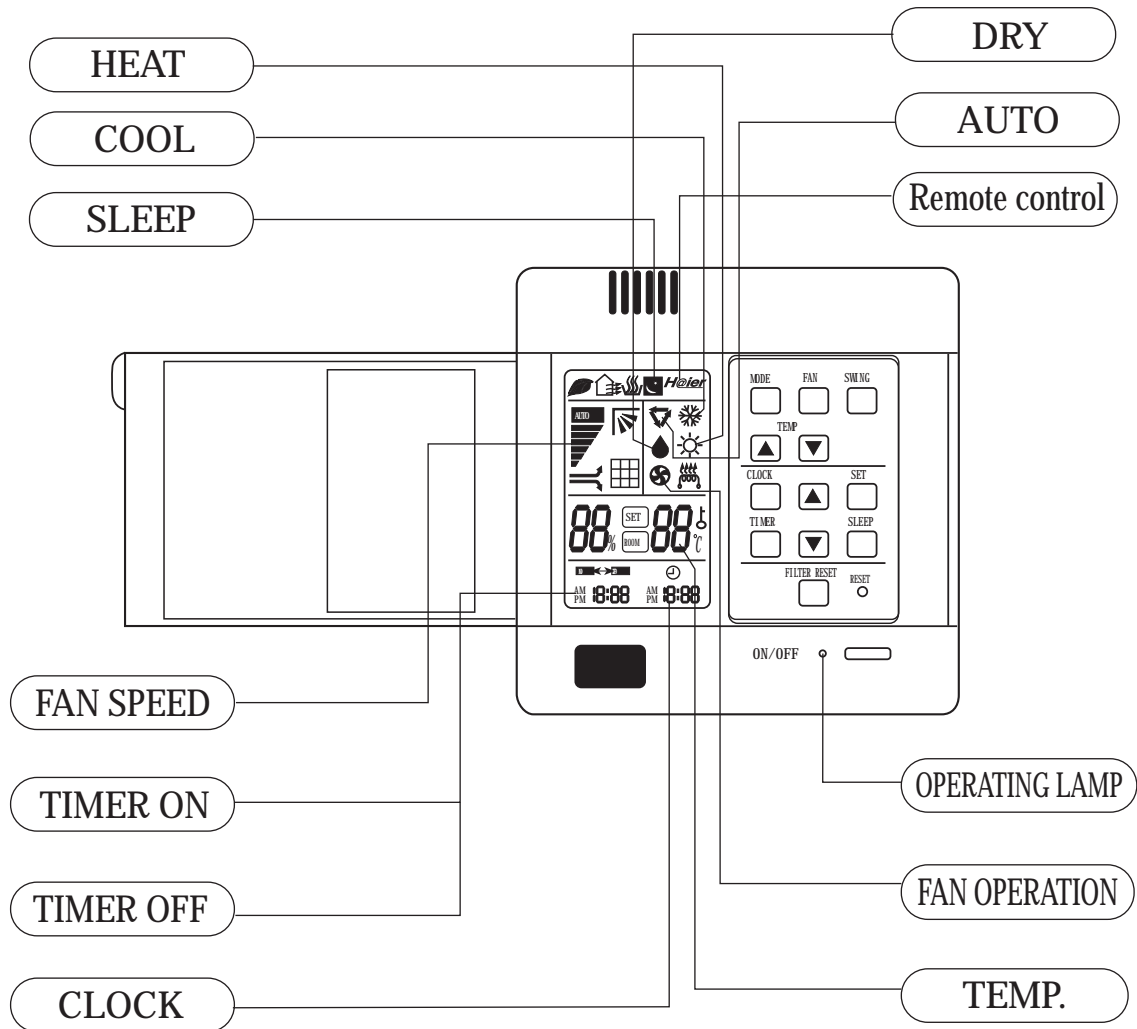


### Clock set

When unit is started for the first time, clock should be adjusted as follows:

- Press CLOCK button, "AM" or "PM" flashes.
- Press ▲ or ▼ to set correct time. Each press will increase or decrease 1min. If the button is kept depressed, time will change quickly.
- After time setting is confirmed, press SET, "AM" and "PM" stop flashing, while clock starts working.

# ■ OPERATION

The air conditioner has the function of **POWER FAILURE RESUME**.

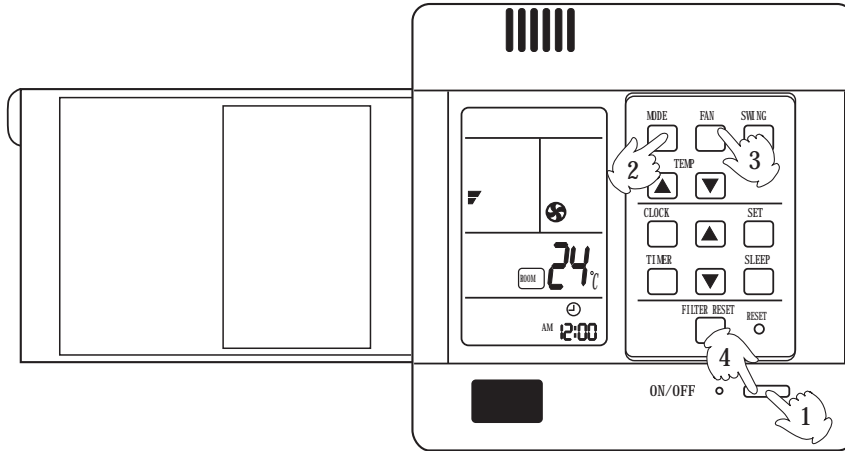

## Fan operation

Enjoy yourself by just a gentle press.

### (1) Unit start

Press ON/OFF button, unit starts.  
 Previous operation status appears on display.  
 (Not Timer setting)  
 Power indicator lights up.

### (2) Select operation mode

Press MODE button. For each press, operation mode changes as follows:



Unit will run in selected mode.  
 stop display at " FAN " FAN.

For cooling only type no " HEAT ☀ " function.

### (3) Fan

Press FAN button. For each press, fan speed changes as follows:



Unit will run at selected fan speed.

### (4) Unit stop

Press ON/OFF button.  
 Only time and room temp remains on LCD.  
 All indicators go out.  
 Vertical flap closed automatically.

## Hints


Wire controller can memorize settings in each operation mode. To run it next time just select the operation mode and it will start with the previous setting.  
 No reselecting is needed. (TIMER ON/OFF needs reselecting)  
 In FAN mode, temp. can't be set.

# ■ OPERATION

## AUTO RUN, COOL, HEAT and DRY operation

### Recommendations

- Use COOL in summer.
- Use HEAT in winter.
- Use DRY in spring, autumn and in damp climate.

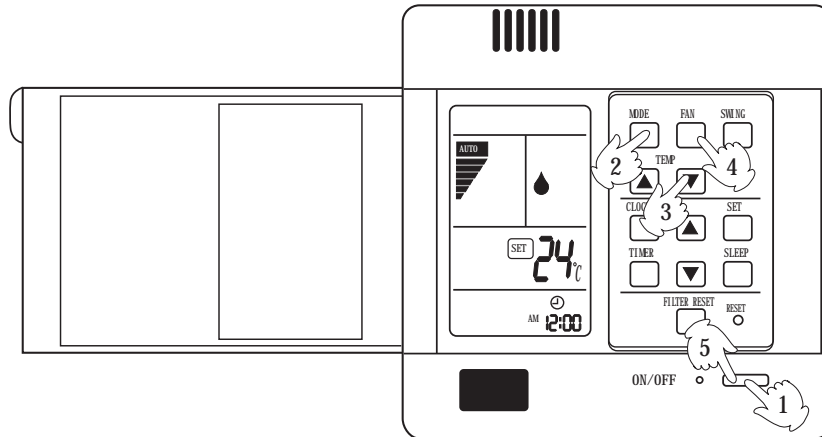

### (1) Unit start

Press ON/OFF button, unit starts.  
Previous operation status appears on display  
(Not Timer setting). Power indicator lights up.

### (2) Select operation mode

Press MODE button. For each press, operation mode changes as follows:



Unit will run in operation mode displayed on LCD.  
Stop display at your desired mode.

### (3) Select temp. setting

Press TEMP button

- ▲ Every time the button is pressed, temp. setting increases 1°C.  
If button is kept depressed, temp. setting will increase quickly.
- ▼ Every time the button is pressed, temp. setting decreases 1°C.  
If button is kept depressed, temp. setting will decrease quickly.

Unit will start running to reach the temp. setting on LCD.

### (4) Fan speed selection

Press FAN button. For each press, fan speed changes as follows:



Unit runs at the speed displayed on LCD.

In HEAT mode, warm air will blow out after a short period of time due to cold-draft prevention function.  
In DRY mode, when room temp. becomes 2°C higher than temp. setting, unit will run intermittently at LOW speed regardless of FAN setting.


### (5) Unit stop

Press ON/OFF button.  
Only time and room temp remains on LCD.  
All indicators go out.  
Vertical flap closes automatically.

### Hints

Wire controller can memorize each operation status. When starting it next time, just press ON/OFF button and unit will run in previous status.

# ■ OPERATION

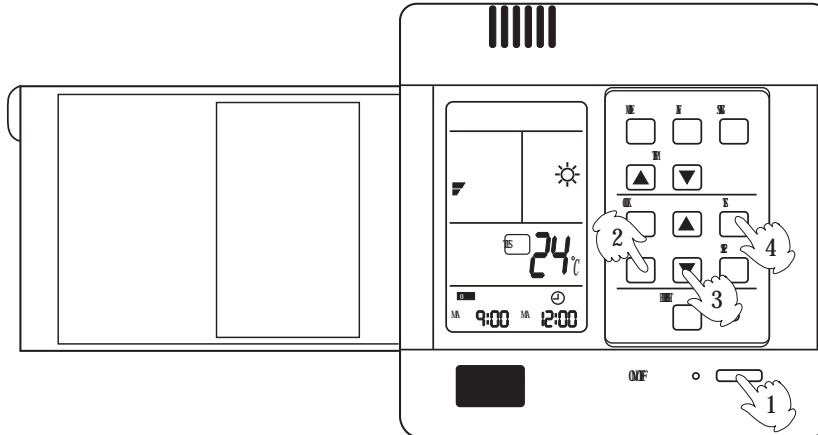

## TIMER operation

Set Clock correctly before starting Timer operation.

You can let unit start or stop automatically at following time: Before you wake up in the morning, or get back from outside or after you fall asleep at night.

### TIMER ON/OFF

(1) After unit start, select your desired operation mode.

Operation mode will be displayed on LCD.  
Power indicator lights up.

(2) TIMER mode selection

Press TIMER button to change TIMER mode.  
Every time the button is pressed, display changes as follows:



Select your desired TIMER mode (ON or OFF)

(3) Timer setting

Press TIME ▲ / ▼ button.

- ▲ Every time the button is pressed, time increases 10min.  
If button is kept depressed, time will change quickly.
- ▼ Every time the button is pressed, time decreases 10min.  
If button is kept depressed, time will change quickly.  
Time will be shown on LCD. It can be adjusted within 24hours.

(4) Confirming your setting

After setting correct time, press SET button to confirm  
"ON" or "OFF" stops flashing.

Time displayed: Unit starts or stops at x hour x min (ON or OFF).

Timer mode indicator lights up.


## To cancel TIMER mode

Just press TIMER button several times until TIMER mode disappears.

### Hints

Wire controller possesses memory function, when use TIMER mode next time, just press SET button after mode selecting if timer setting is the same as previous one.

# ■ OPERATION

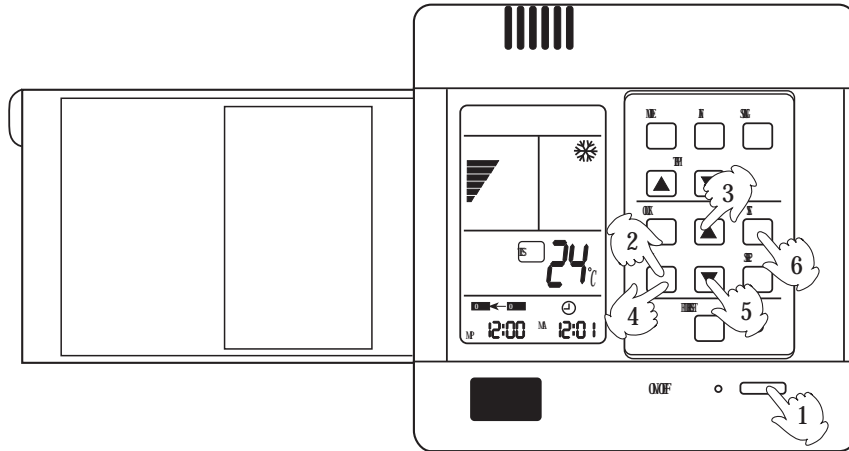

## TIMER ON-OFF

(1) After unit start, select your desired operation mode

Operation mode will be displayed on LCD.  
Power indicator lights up.

(2) Press **TIMER** button to change **TIMER** mode

Every time the button is pressed, display changes as follows:



Select  $\begin{matrix} \text{ON} \\ \text{OFF} \end{matrix}$ .

(3) Time setting for **TIMER ON**

Press **TIME** button.

▲ Every time the button is pressed, time increases 10min.

If button is kept depressed, time will change quickly.

▼ Every time the button is pressed, time decreases 10min.

If button is kept depressed, time will change quickly.

Time will be shown on LCD.

It can be adjusted within 24hours.

AM refers to morning and PM to afternoon.

## To cancel **TIMER** mode

■ Just press **TIMER** button several times until **TIMER** mode disappears.

■ According to the Time setting sequence of **TIMER ON** or **TIMER OFF**, either Start-Stop or Stop-Start can be achieved.

(4) Time confirming for **TIMER ON**

After time setting, press **TIMER** button to confirm.  
"ON" stops blinking, While "OFF" starts blinking.

Time displayed: Unit starts at Xhour X min.

(5) Time setting for **TIMER OFF**

Follow the same procedures in "Time setting for **TIMER ON**".

(6) Time confirming for **TIMER OFF**


After time setting, press **SET** button to confirm  
"OFF" stops flashing.

Time displayed: Unit stops at X hour X min.

# ■ OPERATION

## Comfortable Sleep

At night, before going to bed you can press down the SLEEP button on the controller and the air-conditioner will run by the comfortable sleeping mode to make you sleep more comfortable.

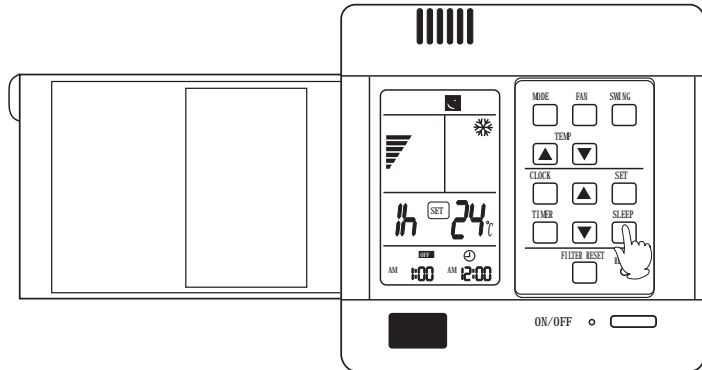

Press SLEEP button once to make the air conditioner have the previous-set sleep time (first power-on is "1h"), the sleep symbol will appear. Press time button ▲ / ▼, you can choose the time in 1~8 hours. Each press of ▲ / ▼, the time increases/reduces 1 hour and "xh" appears in the humidity setting part, "OFF" appears in "TIMER OFF" display part and timer-off time; press SLEEP button again to cancel sleep function, the sleep symbol disappears.

## In cooling, dehumidifying mode

One hour after sleeping operation start, the temp. is 1°C higher than the setting one. After another hour the temp. rises 1°C and then run continuously for another 6 hrs' and then close. The actual temp. is higher than the setting one which is to prevent from being too cool to your sleep.


## In heating mode

One hour after start up, the temp. decrease 2°C lower than the setting one. After another hour decrease by more 2°C.


The temperature will automatically rise by 1°C after another 3 hrs' operation, and then automatically close after 3 hrs' continuous operation. The actual temperature is lower than the setting one which is to prevent from being too hot to your sleep.

Note:

- In AUTO mode, unit will run in SLEEP function according to the operation mode.
- After setting SLEEP function, it is forbidden to calibrate clock.
- If the set sleep-time does not reach 8 hours, the unit will stop operation automatically after set time is complete.
- Set "TIMER-OFF" function first, then set SLEEP, and the sleep-set is performance; set TIMER-ON function first, the sleep function can only be set before TIMER-ON; if set the SLEEP function first, the TIMER function can not be set.

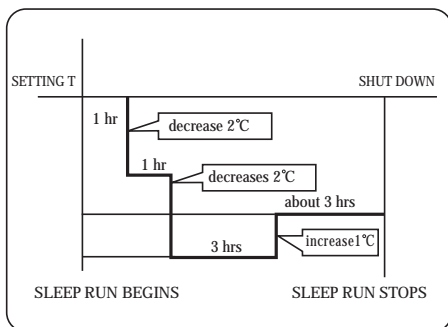

Heat mode

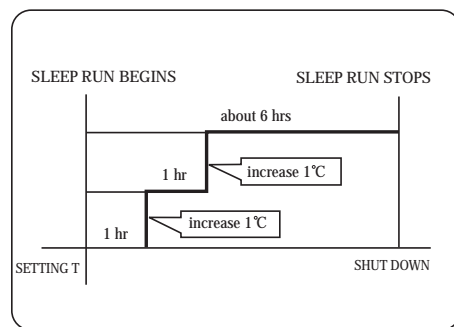

Cooling mode

# ■ OPERATION

---

Power Failure Compensation (to be applied for a necessary situation)

After the power failure compensation is set, if power failure suddenly occurs while the air conditioner is working, it will resume the previous working state when the power is supplied again.

Setting Method: When the wire controller is on (excluding timer mode and fan mode), press the "Sleeping" button on the remote controller 10 times within 5 seconds, and after the buzzer rings 4 times, the air conditioner will enter the state of power failure compensation.

Cancel Method: Press the "Sleeping" button on the wire controller 10 times within 5 seconds, and after the buzzer rings 2 timer, the power failure compensation mode will be cancelled.




Notes: When a power failure suddenly occurs during the air conditioner is working after the power failure compensation is set, if the air conditioner will not be used for a long time, please cut off the power supply to prevent its operation from being resumed after the power is supplied again, or press the "Switch On/Off" button after the power comes again.

In this series changeover switch is set:

1. ON 2.OFF 3.OFF 4.OFF

# ■ MALFUNCTION

please check the following things about your air conditioner before making a service call.

Unit fails to start			
<p>Is the power source switch adjust cut in?</p>  <p>Power supply switch is not ON.</p>	<p>Is city supply power in normal?</p> 	<p>Isn't the signal receiving section exposed to the direct sunlight or strong illumination?</p>	<p>Isn't the earth leakage breaker in action?</p> <p>It is dangerous. Turn off the power supply switch immediately and contact the sales dealer.</p>
Cooling or heating is not sufficient			
<p>Is the thermostat adjust as required?</p>	<p>Isn't the air filter dirty?</p>	<p>Isn't any doors or windows left open?</p>	<p>Doesn't any obstacle exist at the air inlet or outlet?</p>
<p>Isn't the swing louver horizontal? (At HEATING mode) If swing louver is horizontal, the blow wind does not reach floor.</p>	Cooling is not sufficient		
	<p>Isn't sun-shine invading direct?</p>	<p>Isn't any unexpected heating load generated?</p>	<p>Isn't the room much crowded?</p>
<p>The wind does not blow during heating operation Isn't it warming up?</p>  <p>page 9</p>			

When the air conditioner does not operate properly after you have checked the above mentioned items or when the following phenomenon is observed, stop the operation of the air conditioner and contact your sales dealer.

- The fuse or breaker often shuts down.
- Water drops off during cooling operation.
- There is a irregularity in operation or abnormal sound is audible.
- When the CHECK lamp (red) flickers, an irregularity has occurred in the air conditioner.

Flickering	E0	E1	E2	E3	E4	E5	E6	E8	E9
Content of defect	The trouble of the drainage system	The trouble of the room temp. sensor	The trouble of the pipe temp. sensor	The trouble of the outdoor temp. sensor	The trouble of the outdoor pipe temp. sensor	The trouble of the overload current	The trouble of the low pressure pressure of pipe	The trouble of the main control board communication	The trouble of the main control board outdoor board communication





Note:

This unit has a function of automatic restart system after recovering power stoppage. Please contact the sales dealer if it is not required.



# ■ MALFUNCTION

## The followings are not malfunction

<p>Water flowing sound is heard.</p> 	<p>When the air conditioner is started, when the compressor starts or stops during operation or when the air conditioner is stopped, it sometimes sounds "shuru shuru" or "gobo gobo". It is the flowing sound of the refrigerant, and it is not a trouble.</p>
<p>Cracking sound is heard.</p>	<p>This is caused by heat expansion or contraction of plastics.</p>
<p>It smells.</p>	<p>Air which blows out from the indoor unit sometimes smells. The smell results from residents of tobacco smoke or cosmetics stuck inside of unit.</p>
<p>During operation, white fog comes out of indoor unit.</p> 	<p>When the air conditioner is used at restaurant etc. where dense edible oil fume is always exists, white fog sometimes blows out of air outlet during operation. In this case consult sales dealer for cleaning the heat exchanger.</p>
<p>It is switched into the FAN mode during cooling.</p>	<p>To prevent frost from being accumulated on the indoor unit heat exchanger, it is sometimes automatically switched to the FAN mode but it will soon return to the cooling mode.</p>
<p>The air conditioner can not be restarted soon after it stops.</p> 	<p>Even if the operation switch is turned on, cooling, dehumidifying or heating is not operable for three minutes after the conditioner is stopped. Because the protecting circuit is activated. (During this time air conditioner operates in fan mode.)</p> 
<p>Air does not blow or the fan speed can not be changed during dehumidifying</p>	<p>When it is excessively cooled during dehumidifying, the blower automatically repeats reducing and lowering the fan speed.</p>
<p>During operation, operation mode has changed over automatically.</p>	<p>Isn't the AUTO mode selected? In the case of AUTO mode, operation mode is changed automatically from cooling to heating or vise-versa according to the room temperature.</p>
<p>Water or steam generates from the outdoor unit during heating.</p>	<p>This results when frost accumulated on the outdoor unit is removed (during defrosting operation).</p>

# CARE AND MAINTENANCE

## Points to observe

Turn off the power supply switch.



Do not touch with wet hand.



Do not use hot water or volatile liquid.



### CAUTION

- Do not open the inlet grill until fan stops completely.
- Fan will continue rotating for a while by the law of inertia after operation is being stopped.

## Cleaning

1. Clean the air filter by lightly tapping it or with the cleaner. It is more effective to clean the air filter with water.

If the air filter is very dirty, dissolve neutral detergent in the lukewarm water (approx. 30°C), rinse the air filter in the water, and thoroughly wash the air filter off the detergent in the plain water.

2. After drying the air filter, set it up on the air conditioner.



### CAUTION

- Do not dry the air filter with fire.
- Do not run the air conditioner without the air filter.

## Care and Cleaning of the unit

- Clean with soft and dry cloth.
- If it is very dirty, dissolve neutral detergent in the lukewarm water and make the cloth wet with the water. After wiping, clean off the detergent using clean water.

## Post-Season Care

- Operate the unit with FAN mode on a fair day for about half a day to dry the inside of the unit well.
- Stop operation and turn off the power supply switch. Electric power is consumed even the air conditioner is in stop.
- Clean the air filter and set it in the place.

## Pre-Season Care

See that there are no obstacles blocking the air inlet and air outlet of both indoor and outdoor units.

- Make sure that the air filter is not dirty.
- Cut in the power supply switch 12 hours before starting run.

## ■ FOR PREPARATION OF HEATING ("HOT KEEP")


"HOT KEEP" is operated in the following cases.

- When heating is started:  
In order to prevent blowing out of cool wind, the indoor unit fan stopped according to the room temperature which heating operation is started. Wait for approx. 2 to 3 minute, and the operation will be automatically changed to the ordinary heating mode.
- Defrosting operation (in the heating mode):  
When it is liable to frost. the heating operation is stopped automatically for 5 to 12 minutes once per approx. one hour, and defrosting is operated. After defrosting is completed, operation mode is automatically changed to ordinary heating operation.
- When the room thermostat is actuated:  
When room temperature increases and room temperature controller actuates, the fan speed is automatically changed to stop under low temperature condition of indoor heat exchanger. When room temperature decreases, air conditioner automatically changes over to ordinary heating operation.



## ■ WARMING OPERATION

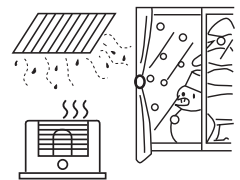



- Heat pump type warming  
With the heat pump type warming, the mechanism of heat pump that concentrate heat of outdoor air with the help of refrigerant to warm the indoor space, is utilized.
- Defrosting operation  
When a room is warmed with a heat pump type air conditioner, frost accumulates on the heat exchanger of outdoor unit along with the drop of indoor temperature. Since the accumulated frost reduces the effect of warming, it is necessary to automatically switch the operation to the defrosting mode. During the defrosting operation, heating operation is interrupted.
- Atmospheric temperature and warming capacity  
Warming capacity of heat pump type air conditioner decreases along with the drop of outdoor temperature.  
When the warming capacity is not sufficient, it is recommended to use another heating implement.
- Period of warm-up  
Since the heat pump type air conditioner employs a method to circulate warm winds to warm the entire space of a room, it takes time before the room temperature rises.  
It is recommendable to start the operation a little earlier in a very cold morning.



# ■ IS THE UNIT INSTALLED CORRECTLY

Confirm the following items for safe and comfortable use of air conditioner.

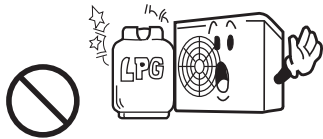The installation work is to be burden on the sales dealer, and do not conduct it by yourself.

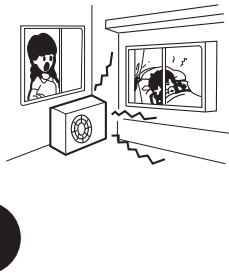Installation place		
<p>Avoid installing the air conditioner near the place where possibility of inflammable gas leakage exists.</p>  <p>Explosion (Ignition) may occur.</p>	<p>Install the unit at well ventilated place.</p>  <p>If some obstacle exist, it may cause capacity reduction or noise increase.</p>	<p>Install the air conditioner firmly on the foundation that can fully support the weight of the unit.</p>  <p>If not, it may cause vibration or noise.</p>
<p>Select the place so as not to annoy neighbor with the hot air or noise.</p> 	<p>Snow protection work is necessary where outdoor unit is blocked up by snow.</p> <p>For details consult your sales dealer.</p>	<p>It is advisable not to install the air conditioner at the following special place. It may cause malfunction, consult the sales dealer when you have to install the unit on such a place.</p> <ul style="list-style-type: none"> <li>• The place where corrosive gas generates (Hot spring area etc.)</li> <li>• The place where salt breeze blows (Seaside etc.)</li> <li>• The place where dense soot smoke exists</li> <li>• The place where humidity is extraordinarily high</li> <li>• The place where near the machine which radiates the electromagnetic wave</li> <li>• The place where voltage variation is considerably large</li> </ul>

## Electric work

The electric work must be burden on the authorized engineer with qualification for electric work and grounding work, and the work must be conducted in accordance with electric equipment technical standard.

- The power source for the unit is to be of exclusive use.
- An earth leakage breaker should be installed. (This is necessary to prevent electric shock.)
- The unit must be grounded.

## When you change your address or the installation place

Special technology is required for removal or reinstallation of air conditioner, consult the sales dealer. Besides, construction expense is charged for removal or reinstallation.

## For inspection and maintenance


The capacity of air conditioner will decrease by contamination of inside of unit when it is used for about three years although depending upon the circumstances under which it is used, and so in addition to the usual maintenance service, special inspection/maintenance service is necessary. It is recommended to make a maintenance contract (charged) by consulting your sales dealer.

# ■ INSTALLATION MANUAL FOR WIRE CONTROLLER

## 1. Remove upper part of wire controller


Remove upper part of wire controller by press.

PCB is mounted on lower part of wire controller, be careful not to damage it.

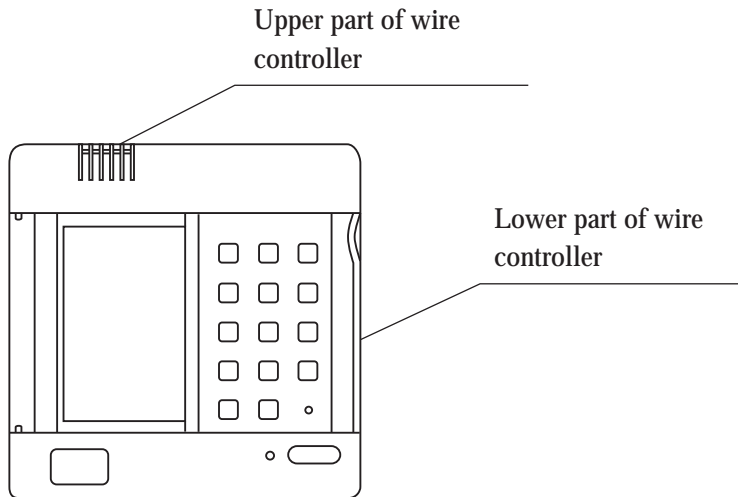

## 2. Install wire controller

- (1) For exposed installation, use 2 wood screws (accessory).
- (2) For recessed installation, use 2 wood screws (accessory).

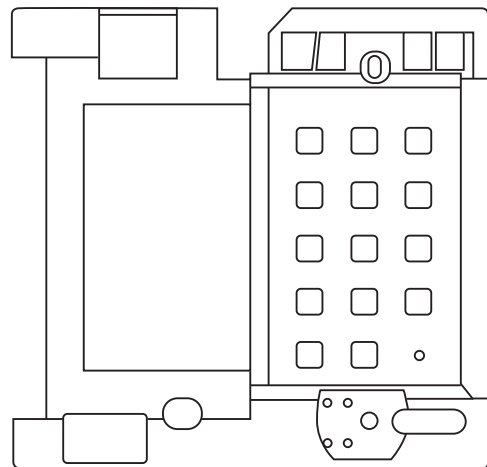

## Note



Try as far as possible a flat surface for installation. Don't use excessive force when tightening screws, or lower part might get deformed.

# ■ INSTALLATION MANUAL FOR WIRE CONTROLLER

## 3. Indoor unit wiring

Connect terminals (A,B,C,D) on lower part of wire controller to terminals (A,B,C,D) on PCB of indoor unit.


**Hint**  
When make wiring, please keep a distance between wires and power supply cord.

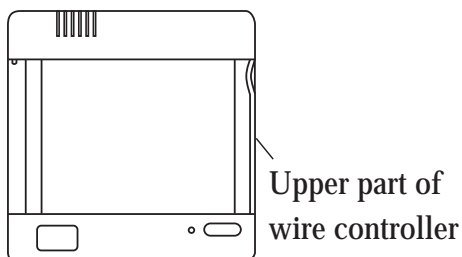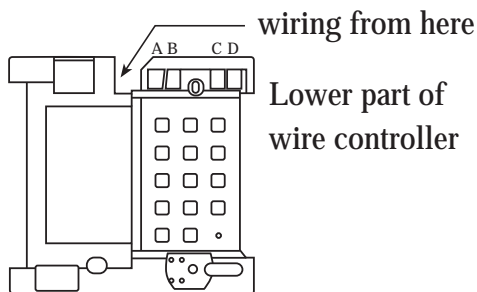

Wire size

Cord kind	Shield wire (4 core) (refer to Hint 3,4)
Size	0.33mm <sup>2</sup>

- Use shielded wires for telecommunication between wire controller and indoor unit; indoor unit and outdoor unit. Ground the shield on one side. Otherwise misoperation because of noise may occur.
- Signal wire is self-provided.



**Hint**

Tread surface of the terminal well so that shielding may not contact other part.

## 4. Replace the upper part of wire controller

Be careful not to press the wiring.

**Hint**

1. Switch box and cord for wiring are not supplied.
2. Don't touch PCB with hand.

# ■ INSTALLATION MANUAL FOR OUTDOOR UNIT


## <Heat Pump model/Cooling Only model >

### ⚠ WARNING

BE SURE TO READ THESE INSTRUCTIONS CAREFULLY BEFORE BEGINNING INSTALLATION. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD CAUSE SERIOUS INJURY OR DEATH, EQUIPMENT MALFUNCTION AND/OR PROPERTY DAMAGE. BE SURE TO READ INSTALLATION MANUAL FOR INDOOR UNIT WITH THIS MANUAL.

## 1. Accessories

"Edging" for protection of electric wires from an opening edge.

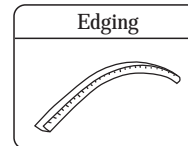


## 2. Selection of the place of installation

Select the place of installation satisfying the following conditions and, at the same time, obtain a consent from the client or user.

- Place where air circulates.
- Place free from heat radiation from other heat sources.
- Place where drain water may be discharged.
- Place where noise and hot air may not disturb the neighborhood.
- Place where there is not heavy snowfall in the winter time.
- Place where obstacles do not exist near the air inlet and air outlet .
- Place where the air outlet may not be exposed to a strong wind.
- Place surrounded at four sides are not suitable for installation. A 1m or more of overhead space is needed for the unit.
- Mount guide-louvers to place where short-circuit is a possibility.
- When installing several units, secure sufficient suction space to avoid short circuiting.

### (1) Open space requirement around the unit

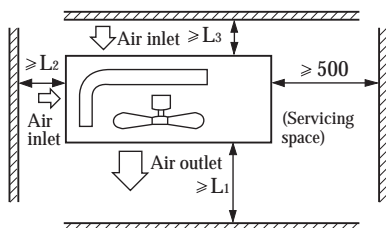


Unit: mm

Case	I	II	III
Distance			
L1	open	open	500
L2	300	0	open
L3	150	300	150

### (2) Installation where the area with strong winds.

Install the unit so that the air outlet section of the unit must NOT be faced toward wind direction.

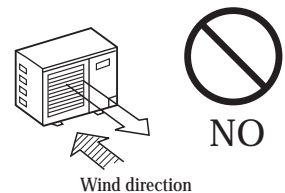


## 3. Installation of outdoor unit

### (1) Installation


Fix the unit in a proper way according to the condition of a place where it is installed by referring to the following .

#### (a) Concrete foundation

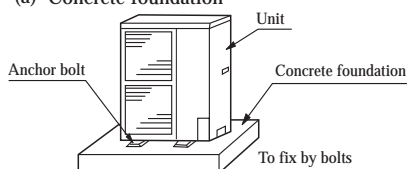

Note (1) Give enough room for the concrete foundation to fix by anchor bolts.

#### Foundation anchor

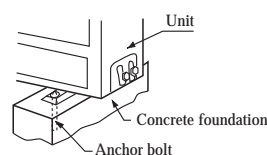


Note (1) Place the concrete foundation deep enough.

- Install the unit so that the angle of inclination must be less than 3 degrees.

# INSTALLATION MANUAL FOR OUTDOOR UNIT

## 4. Refrigerant piping


### (1) Outline piping

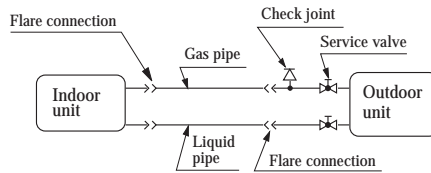

### (2) Piping size

Model	HDU-42H03/H	HDU-24H03/H HDU-28H03/H
Gas piping	Φ 19.05(3/4")x1.0mm	Φ 15.88(5/8")x1.0mm
Liquid piping	Φ 9.52(3/8")x0.8mm	Φ 9.52(3/8")x0.8mm

- Install the removed flared nuts to the pipes to be connected, then flare the pipes.

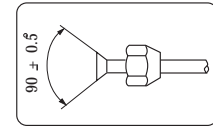

### (3) Limitations for one way piping length and vertical height difference.

- One way piping length: less than 30m (HDU-24H03/H , HDU-28H03/H).  
less than 50m (for HDU-42H03/H).
- Vertical height difference: Less than 15m (for HDU-24H03/H , HDU-28H03/H).  
less than 30m (for HDU-42H03/H).

#### Precautions for refrigerant piping


- Do not twist or crush piping.
- Be sure that no dust is mixed in piping.
- Bend piping with as wide angle as possible.
- Keep insulating both gas and liquid piping.
- Check flare-connected area for gas leakage.

### (4) Air purge

a. For HDU-24H03/H , HDU-28H03/H.

Purge air out of indoor unit and piping as shown in the Fig.

- (1) Remove the valve cap on 2-way valve in outdoor unit.
- (2) Loosen by 1-1.5 turn the flare nut of gas pipe, which is connected to 3-way valve.
- (3) Loosen the valve rod of 2-way valve by 90 degrees (use a hexagon wrench) for about 15 seconds, air will be pushed out from flare nut on gas pipe.
- (4) Open 2-way and 3-way valves using specified torque.
- (5) Tighten the caps on the valves with specified torque.
- (6) Conduct gas leakage using gas leakage detector or soap water.

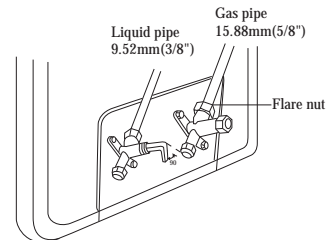

Note: When additional refrigerant piping is necessary, first purge air out of connecting pipe by external gas, then drive out the excessive refrigerant by purging method.  
Brand new unit is charged 80g more refrigerant than spec. This is only for first installation to purge air in the indoor unit and connecting pipe.

b. For HDU-42H03/H.


Carry out the air purge of the indoor unit and refrigerant piping by vacuuming.

Procedures:

- 1) Tighten all the flare nuts of the piping on the side of indoor and outdoor units so that there is no leakage.
- 2) Carry out vacuuming from the service valve charge port with the service valves (both liquid and gas side) of the outdoor unit fully closed.
- 3) After vacuuming, remove the cap nut for the valve stem, and tighten the cap nuts (cap nuts for valve stem and charge port) with service valve (both liquid and gas) fully opened.

### (5) Method of opening and closing service valve of outdoor unit

- 1) Remove the hexagonal cap nut.
- 2) Operate the valve using a hexagonal wrench to open by left turn and to close by right turn.
- 3) Tighten the hexagonal cap nut after the piping works.

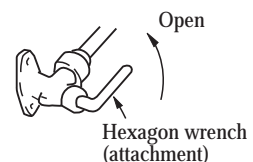



# INSTALLATION MANUAL FOR OUTDOOR UNIT

## (6) Additional charge of refrigerant

Outdoor unit is precharged at a factory for the piping length up to 5m. Additional charge is not required up to 5m.

Model \ Item		Basic refrigerant charge amount <sup>(i)</sup>	Factory charge amount of refrigerant		Additional charge amount <sup>(ii)</sup> per meter	Length that additional charge is not required	Maximum piping length
			Outdoor unit	Indoor unit			
Heat pump	HDU-42H03/H	3.44	3.52	0	0.06	5m <sup>(v)</sup> <sup>(viii)</sup>	50m
	HDU-24H03/H HDU-28H03/H	2.32	2.40	0	0.06	5m <sup>(vii)</sup> <sup>(viii)</sup>	30m

Notes (i) Basic refrigerant charge amount means refrigerant amount when refrigerant piping length is 5m.

(ii) When the refrigerant piping length exceeds the length that additional refrigerant charge is not required, charge additional refrigerant based on to the calculated amount of refrigerant per unit piping length.

### Example of additional charge amount calculation

Calculate the additional charge amount when the piping length is 25 m.

$$(25 - 5) \times 0.06 = 1.2$$


↑ Additional charge amount (kg)  
↑ Additional charge amount per 1m (kg/m)  
↑ Length that additional refrigerant charge is not required (m)  
↑ Total length of the piping (one way) (m)

Additional charge amount of refrigerant = 0.70kg (Calculate the amount in any case.)


If air perge with the refrigerant is forbidden at the local, please use the vacuum method (Please see the below figure)

### To use vacuum pump


① Detach the service port's cap of 3-way valve, the valve rod's cap for 2-way valve and 3-way's, connect the service port into the projection of charge hose (low) for gaugemanifold. Then connect the projection of charge hose (center) for gaugemanifold into vacuum pump.

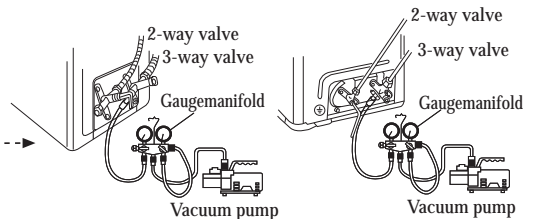

② Open the handle at low in gaugemanifold, operate vacuum pump. If the scale-moves of gauge (low) reach vacuum condition in a moment, check ① again.

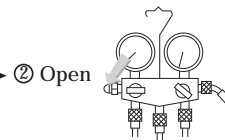


③ Vacuumize for over 15min. And check the level gauge which should read -0.1 MPa (-76 cm Hg) at low pressure side. After the completion of vacuumizing, close the handle 'Lo' in gaugemanifold and stop the operation of the vacuum pump. Check the condition of the scale and hold it for 1-2min. If the scale-moves back in spite of tightening, make flaring work again, the return to the beginning of ③.

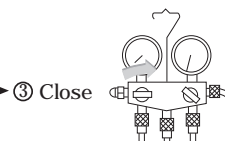

# INSTALLATION MANUAL FOR OUTDOOR UNIT

④ Open the valve rod for the 2-way valve to an angle of anticlockwise 90 degree. After 6 seconds later, close the 2-way valve and make the inspection of gas leakage.

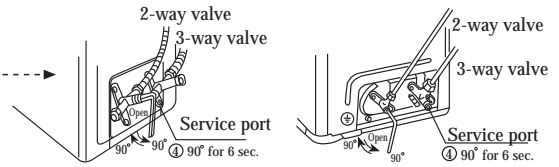


⑤ No gas leakage?


In case of gas leakage, tighten parts of pipe connection. If leakage stops, then proceed ⑥ steps.

If it does not stop gas leakage, discharge whole refrigerants from the service port. After flaring work again and vacuumize, fill up prescribed refrigerant from the gas cylinder.

⑥ Detach the charge hose from the service port, open 2-way valve and 3-way. Turn the valve rod anticlockwise until hitting lightly.

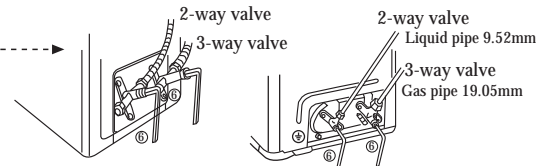


⑦ To prevent the gas leakage, turn the service port's cap, the valve rod's cap for 2-way valve and 3-way's a little more than the point where the torque increases suddenly.

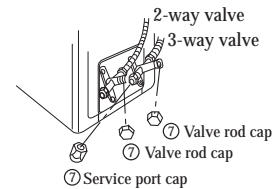

⑧ After attaching the each caps, check the gas leakage around the caps.

**CAUTION:**  
If the refrigerant of the air conditioner leaks, it is necessary to make all the refrigerant out, then charge the liquid refrigerant into air conditioner according to the amount marked on the name plate.

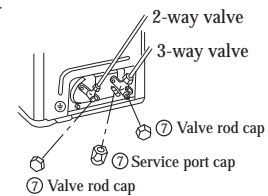

## 5. Electric wiring

### ⚠ WARNING

#### DANGER OF BODILY INJURY OR DEATH

TURN OFF ELECTRIC POWER AT CIRCUIT BREAKER OR POWER SOURCE BEFORE MAKING ANY ELECTRIC CONNECTIONS. GROUND CONNECTIONS MUST BE COMPLETED BEFORE MAKING LINE VOLTAGE CONNECTIONS.

(1) Selection of size of power supply and interconnecting wires.

#### Precautions for Electric wiring

- Electric wiring work should be conducted only by authorized personnel.
- Do not connect more than three wires to the terminal block. Always use round type crimped terminal lugs with insulated grip on the ends of the wires.
- Use copper conductor only.


Select wire sizes and circuit protection from table below. (This table shows 20 m length wires with less than 2% voltage drop.)

Item Model	Phase	Circuit breaker		Power source wire size (minimum)	Earth leakage breaker	
		Switch breaker (A)	Overcurrent protector rated capacity (A)		Switch breaker	Leak current
HDU-42H03/H	3	30	20	2.5mm <sup>2</sup>	30	30mA
HDU-24H03/H HDU-28H03/H	1	40	26	4.0mm <sup>2</sup>	40	30mA

# INSTALLATION MANUAL FOR OUTDOOR UNIT

## (2) Wiring connection

Make wiring to supply power to the outdoor unit, so that the power for the indoor unit is supplied by \* and \* terminals.

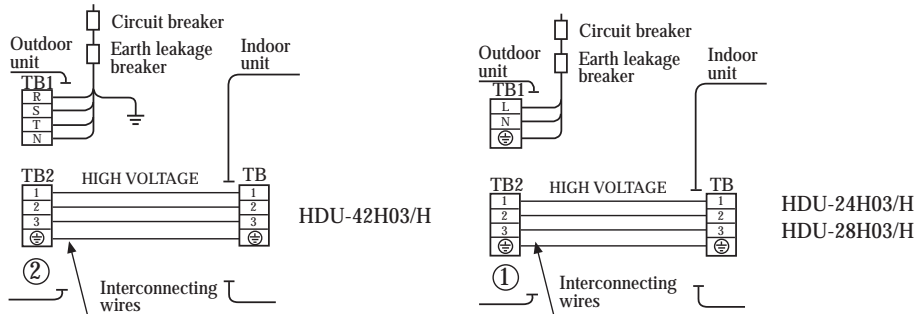


### ⚠ WARNING

DO NOT CONNECT THE NEUTRAL WIRE (N) TO (R), (S) OR (T) PHASE. INTERCONNECTING WIRES MUST BE WIRED WITH SAME SYMBOLS ON THE TERMINALS OF BOTH INDOOR AND OUTDOOR UNIT. INCORRECT WIRING CAUSE EQUIPMENT DAMAGE OR A FIRE.

## (3) Wiring procedure

- 1) Remove set screws on the side before taking off the front panel toward the direction shown in figure.
- 2) Connect wires to the terminal block correctly and fix the wires with a wire clamp equipped near by the terminal block.
- 3) Route the wires in a proper way and penetrate the wires through the opening for electric wiring on the side panel.

## 6. Test run

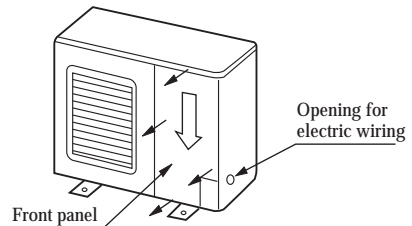

### ⚠ CAUTION

THIS UNIT WILL BE STARTED INSTANTLY WITHOUT "ON" OPERATION WHEN ELECTRIC POWER IS SUPPLIED.  
BE SURE TO EXECUTE "OFF" OPERATION BEFORE ELECTRIC POWER IS DISCONNECTED FOR SERVICING.

- This unit has a function of automatic restart system after recovering power stoppage.

### (1) Before starting test run (for all Heat pump models)

Confirm whether the power source breaker (main switch) of the unit has been turned on for over 12 hrs to energize the crankcase heater in advance of operation.

### (2) Test run

Run the unit continuously for about 30 minutes, and check the following.

- Suction pressure at check joint of service valve for gas pipe.
- Discharge pressure at check joint on the compressor discharge pipe.
- Temperature difference between return air and supply air for indoor unit.

# ■ INSTALLATION MANUAL FOR INDOOR UNIT

## Safety precautions

- Please read these "Safety Precautions" first then accurately execute the installation work.
- Though the precautionary points indicated herein are divided under two headings, **⚠ WARNING** and **⚠ CAUTION**, those points which are related to the strong possibility of an installation done in error resulting in death or serious injury are listed in the **⚠ WARNING** section. However, there is also a possibility of serious consequences in relationship to the points listed in the **⚠ CAUTION** section as well. In either case, important safety related information is indicated, so by all means, properly observe all that is mentioned.
- After completing the installation, along with confirming that no abnormalities were seen from the operation tests, please explain operating methods as well as maintenance methods to the user (customer) of this equipment, based on the owner's manual.  
Moreover, ask the customer to keep this sheet together with the owner's manual.

### ⚠ WARNING

- This system should be applied to places as office, restaurant, residence and the like. Application to inferior environment such as engineering shop could cause equipment malfunction.
- Please entrust installation to either the company which sold you the equipment or to a professional contractor. Defects from improper installations can be the cause of water leakage, electric shocks and fires.
- Execute the installation accurately, based on following the installation manual. Again, improper installations can result in water leakage, electric shocks and fires.
- When a large air-conditioning system is installed to a small room, it is necessary to have a prior planned countermeasure for the rare case of a refrigerant leakage, to prevent the exceeding of threshold concentration. In regards to preparing this countermeasure, consult with the company from which you purchased the equipment, and make the installation accordingly. In the rare event that a refrigerant leakage and exceeding of threshold concentration does occur, there is the danger of a resultant oxygen deficiency accident.
- For installation, confirm that the installation site can sufficiently support heavy weight. When strength is insufficient, injury can result from a falling of the unit.
- Execute the prescribed installation construction to prepare for earthquakes and the strong winds of typhoons and hurricanes, etc. Improper installations can result in accidents due to a violent falling over of the unit.
- For electrical work, please see that a licensed electrician executes the work while following the safety standards related to electrical equipment, and local regulations as well as the installation instructions, and that only exclusive use circuits are used.  
Insufficient power source circuit capacity and defective installation execution can be the cause of electric shocks and fires.
- Accurately connect wiring using the proper cable, and insure that the external force of the cable is not conducted to the terminal connection part, through properly securing it. Improper connection or securing can result in heat generation or fire.
- Take care that wiring does not rise upward, and accurately install the lid/service panel. Its improper installation can also result in heat generation or fire.
- When setting up or moving the location of the air conditioner, do not mix air etc. or anything other than the designated refrigerant (R22) within the refrigeration cycle.  
Rupture and injury caused by abnormal high pressure can result from such mixing.
- Always use accessory parts and authorized parts for installation construction. Using parts not authorized by this company can result in water leakage, electric shock, fire and refrigerant leakage.

### ⚠ CAUTION

- Execute proper grounding. Do not connect the ground wire to a gas pipe, water pipe, lightning rod or a telephone ground wire. Improper placement of ground wires can result in electric shock.
- The installation of an earth leakage breaker is necessary depending on the established location of the unit. Not installing an earth leakage breaker may result in electric shock.
- Do not install the unit where there is a concern about leakage of combustible gas.  
The rare event of leaked gas collecting around the unit could result in an outbreak of fire.
- For the drain pipe, follow the installation manual to insure that it allows proper drainage and thermally insulate it to prevent condensation. Inadequate plumbing can result in water leakage and water damage to interior items.

# ■ INSTALLATION MANUAL FOR INDOOR UNIT

## ⚠ NOTICE

All Wiring of this installation must comply with NATIONAL, STATE AND LOCAL REGULATIONS. These instructions do not cover all variations for every kind of installation circumstance. Should further information be desired or should particular problems occur, the matter should be referred to your local distributor.

## ⚠ WARNING

BE SURE TO READ THESE INSTRUCTIONS CAREFULLY BEFORE BEGINNING INSTALLATION. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD CAUSE SERIOUS INJURY OR DEATH, EQUIPMENT MALFUNCTION AND/OR PROPERTY DAMAGE.

### 1. Before installation [Before finishing installation, do not throw the attached parts installation needs]

- Confirm the way to move the unit to the installation place.
- Before moving the unit to the installation place, do not remove their packages.  
When have to remove the package, use a soft material or protection board with rope to lift the unit assembly to avoid unit damage or bumping a scrape.

### 2. Choose installation place

(1) The chosen installation place should meet the following requirements and get the user's consent.


- Place ensures ideal airflow distribution.
- The passage of airflow has no obstacles.
- When importing outside air, it should be imported directly from outdoors. (if the pipe can not be extended, it also can not be imported from top)
- Place ensures enough space for maintenance.
- The pipe length between indoor and outdoor unit is in the permitted limit (referring to outdoor unit installation part).
- The indoor unit, outdoor unit, electric wire and connection wire is at least 1m away from television and radio. This is to avoid the image disturbance and noise caused by the above-mentioned home appliance. (Even if 1m away, if the electromagnetic wave is too strong, it can also cause noise.)

(2) The height of ceiling

- The indoor unit can install on the ceiling, which height is no more than 3m.

(3) Install and use the hoisting screw. Check if the installation place can bear the weight of unit assembly.



- If not certain, strengthen it before install the unit.

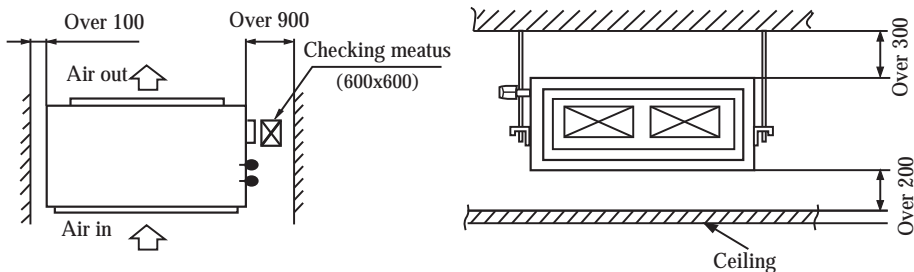

# INSTALLATION MANUAL FOR INDOOR UNIT

## 3. Preparation before installation

(1) The position relation among hoisting screw (unit: mm)

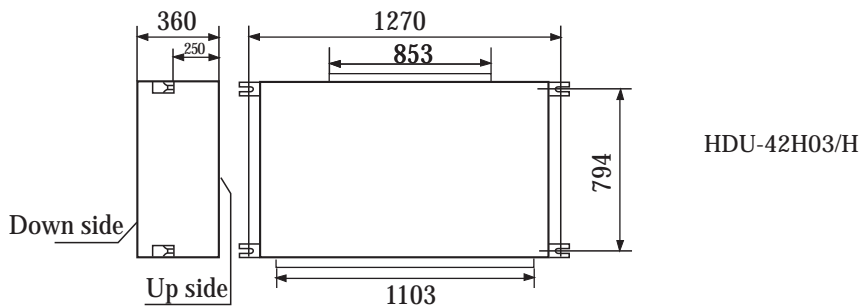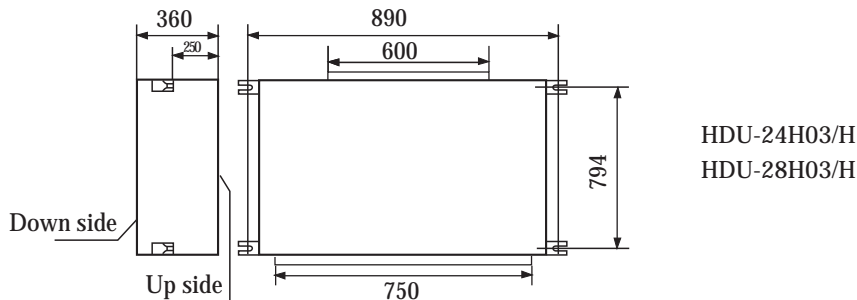

(2) If necessary, cut the opening installation and checking needed on the ceiling. (If has ceiling)

- Before installation, finish the preparation work of all the pipes (refrigerant, drainage) and wire (wire controller connection wire, indoor and outdoor unit connection wire) of indoor unit, so that after installation, they can be immediately connected with outdoor unit.
- Cut the opening on the ceiling. Maybe it needs to strengthen the ceiling to keep the ceiling even and flat and prevent the ceiling from vibration. For details, please consult to the builder.


(3) Hanger bolts installation

- Use care of the piping direction when the unit is installed.

(Use M10 screw bolt)

In order to bear the weight of the unit, for existed ceiling, using foundation screw bolt, for new ceiling, using burying embedded screw bolt, burying screw bolt or spot supplied other parts.


Before going on installation, adjust the gaps with ceiling.

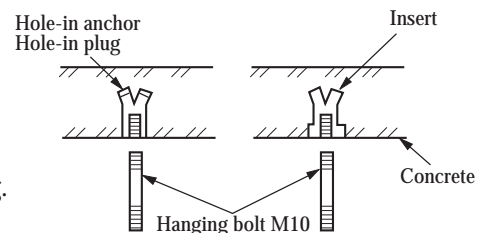

# INSTALLATION MANUAL FOR INDOOR UNIT

## 4. Installation of indoor unit

- Fix the indoor unit to the hanger bolts.  
If required, it is possible to suspend the unit to the beam, etc.  
Directly by use of the bolts without using the hanger bolts.

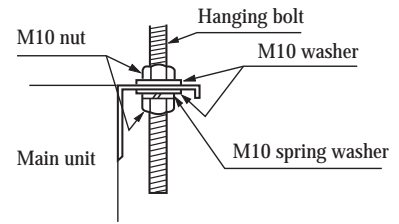


### Note

When the dimensions of main unit and ceiling holes does not match, it can be adjusted with the slot holes of hanging bracket.



### Adjusting to the levelness

- Adjust the out-of levelness using a level or by the following method.
  - Make adjustment so that the relation between the lower surface of the unit proper and water level in the hose becomes as given below.
- Unless the adjustment to the levelness is made properly, malfunctioning or failure of the float switch may occur.

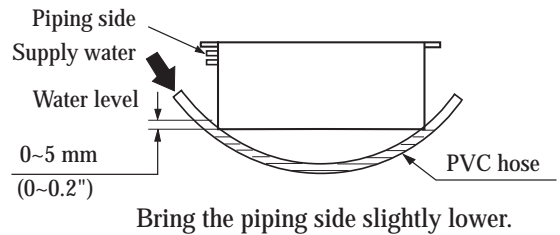


## 5. Drain Piping

- Drain piping should always be in a downhill grade (1/50~1/100) and avoid riding across an elevation or making traps.

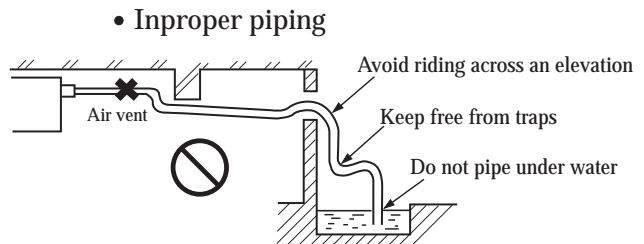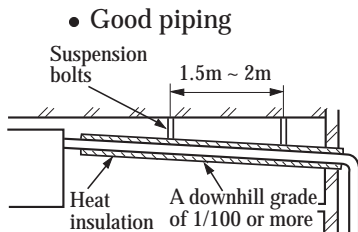


- When connecting the drain pipe to unit, pay sufficient attention not to apply excess force to the piping on the unit side. Also, fix the piping at a point as close as possible to the unit.
- For drain pipe, use hard PVC general purpose pipe VP-25(I.D.1") which can be purchased locally. When connecting, insert a PVC pipe end securely into the drain socket before tightening securely using the attached drain hose and clamp. Adhesive must not be used connection of the drain socket and drain hose (accessory).

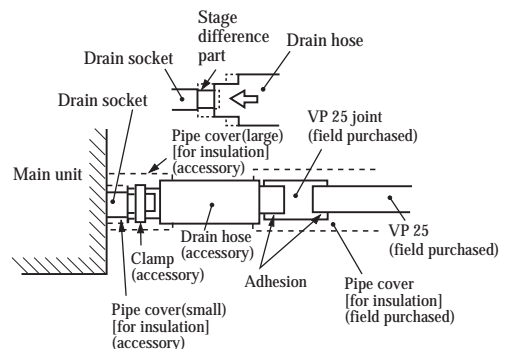


# INSTALLATION MANUAL FOR INDOOR UNIT

- (d) When constructing drain piping for several units, position the common pipe about 100 mm below the drain outlet of each unit as shown in the sketch. Use VP-30(1 1/4") or thicker pipe for this purpose.

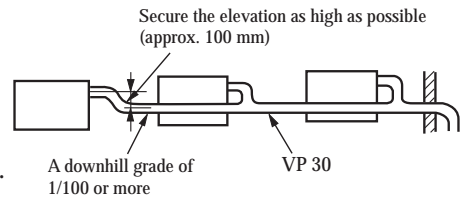

- (e) The stiff PVC pipe put indoor side should be heat insulated.
- (f) Avoid putting the outlet of drain hose in the places with irritant gas generated. Do not insert the drain hose directly into drainage, where the gas with sulfur may be generated.
- (g) Backwater bend  
Because the drain spout is at the position, which negative pressure may occur. So with the rise of water level in the drain pan, water leakage may occur. In order to prevent water leakage, we designed a backwater bend. The structure of backwater bend should be able to be cleaned. As the below figure shown, use T type joint.


- As figure shown, set a backwater bend in the middle of drain hose.

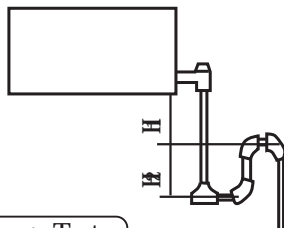

$H1=100\text{mm}$  or the static pressure of air sending motor  
 $H2=1/2H1$  (or between 50~100mm)

## Drainage Test


- ① Conduct a drainage test after completion of the electrical work.
- ② During the trial, make sure that drain flows properly through the piping and that no water leaks from connections.
- ③ In case of a new building, conduct the test before it is furnished with the ceiling.
- ④ Be sure to conduct this test even when the unit is installed in the heating season.

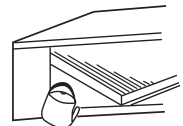


## Procedures

- ① Supply about 1000 cc of water to the unit through the air outlet using a feed water pump.
- ② Check the drain while cooling operation.

## 6. Installation of air suction and discharging duct

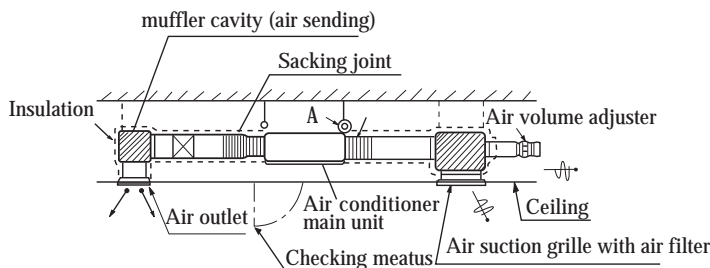

Enlarging chart of profile chart A  
Vibration resistance hook

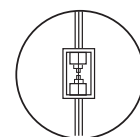


Please consult the after-sales service worker of Haier Air Conditioner for the choosing and installation of suction inlet, suction duct, discharging outlet and discharging duct. Calculating the design drawing and outer static pressure, and choose the discharging duct with proper length and shape.



# INSTALLATION MANUAL FOR INDOOR UNIT

- The length difference among every duct is limited below 2:1.
- Reduce the length of duct as possible as can.
- Reduce the amount of bend as possible as can.
- Use heat insulation material to bind and seal the part connecting main unit and the flare part of air discharging duct. Perform duct installation work, before the fitment of ceiling.

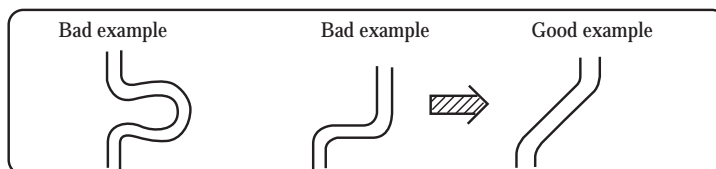

## 7. Calculation method of the dimension of the simple quadrate air duct

Presuming the unit length friction impedance of the duct is 1Pa/m, when the dimension of one side of the air duct is fixed as 250mm, as shown below:

	Air volume	Duct(mm×mm)	Air volume	Duct(mm×mm)
Ⓐ	2400m <sup>3</sup> /h (40m <sup>3</sup> /mi n)	250x560	1200m <sup>3</sup> /h (20m <sup>3</sup> /mi n)	250x310
Ⓑ	600m <sup>3</sup> /h (10m <sup>3</sup> /mi n)	250x190	300m <sup>3</sup> /h (5m <sup>3</sup> /mi n)	250x120
		HDU-42H03/H	HDU-24H03/H HDU-28H03/H	

- The calculation of duct resistance (the simple calculation is as follow table)

Straight part	Calculate as per 1m length 1Pa, 1Pa/m
Bend part	Each bend takes as a3~4m long straight duct
Air out part	Calculate as 25Pa
Static pressure box	Calculate as 50Pa/each
Air inlet grille (with air filter)	Calculate as 40Pa/each

- The chosen chart of simple duct

Note: 1Pa/m=0. 1mmAg/m


Air volume	Shape	Square duct
	Item	Dimension
m <sup>3</sup> /h(m <sup>3</sup> /n)		(mm×mm)
100		250 x 60
200		250 x 90
300		250 x 120
400		250 x 140
500		250 x 170
600(10)		250 x 190
800		250 x 230
1,000		250 x 270
1,200(20)		250 x 310
1,400		250 x 350
1,600		250 x 390

Air volume	Shape	Square duct
	Item	Dimension
m <sup>3</sup> /h(m <sup>3</sup> /n)		(mm×mm)
1,800(30)		250 x 430
2000		250 x 470
2400		250 x 560
3,000(50)		250 x 650
3,500		250 x 740
4,000		250 x 830
4,500		250 x 920
5,000		250 x 1000
5,500		250 x 1090
6,000(100)		250 x 1180

# INSTALLATION MANUAL FOR INDOOR UNIT


## 8. The attentive matters in installation of air suction and discharging duct

- Recommend to use anti-frost and sound-absorbing duct. (locally bought)
- The duct installation work should be finished before the fitment of ceiling.
- The duct must be heat insulated.
- The specific air-discharging outlet should be installed at the place where the airflow can be reasonably distributed.
- The surface should leave a checking meatus for checking and maintenance.

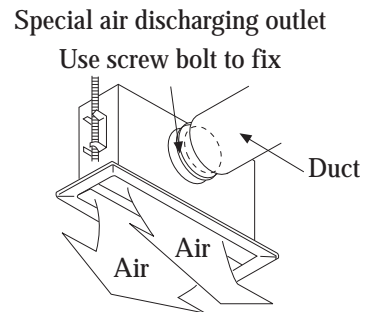

## 9. The examples of improper installation

- Do not use air in duct and take the ceiling inner side instead. The result is because of the irregular outer air mass, strong wind and sunshine, the humidity is increased.
- There may be water drop on the outside of duct. For cement and other new constructions, even if not taking ceiling inner side as duct, the humidity will also be so high. At this time, use glass fiber to perform heat preservation to the whole. (use iron net to bind the glass fiber)
- Maybe exceeding the unit operation limit (for example: when indoor dry bulb temperature is 35°C, wet bulb temperature 24°C), it may lead to overload of compressor.
- Affected by the capacity of air discharging fan, the strong wind in the outer duct and wind direction, when unit air sending volume exceeds the limit, the discharged water of heat exchanger will overflow, leading to water leakage.

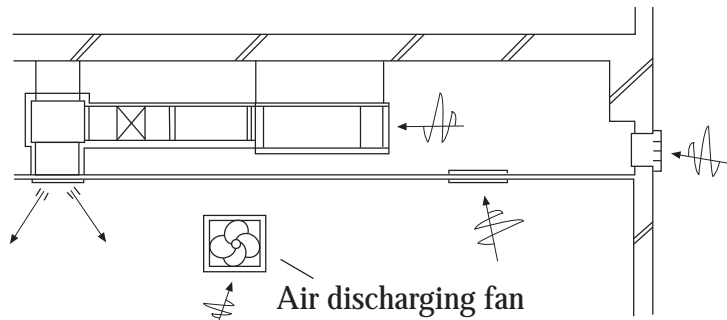

Improper example

# INSTALLATION MANUAL FOR INDOOR UNIT

## 10. The operation method of fan controller

Through the fan controller switch in the electric box, the air volume of this unit can be continuously adjusted.

It is unnecessary to adjust air volume through the duct side wind level (unit outside static adjustment).



The air volume set should be in the operation air volume range.

Figure I shows the position of fan controller in the electric box and operation method.

After finishing the electric work, perform test run. According to the main points in Figure II making the chosen switch No. accordant. And confirm if it reaches the needed air volume.

**Note:**

- 1) When operating the fan controller, it is possible to touch the electric charging part, so do cut off the power supply.
- 2) Do not set the dial at the position less than 1.
- 3) The figure circled in Figure II indicate the capacity number of fan controller. The non-listed capacity number may exceed the permitted operation capacity range, so it is impossible to operate.
- 4) When delivering from factory, the capacity number of fan controller is set at  $\hat{\imath}$ No.5 $\hat{\imath}$ .

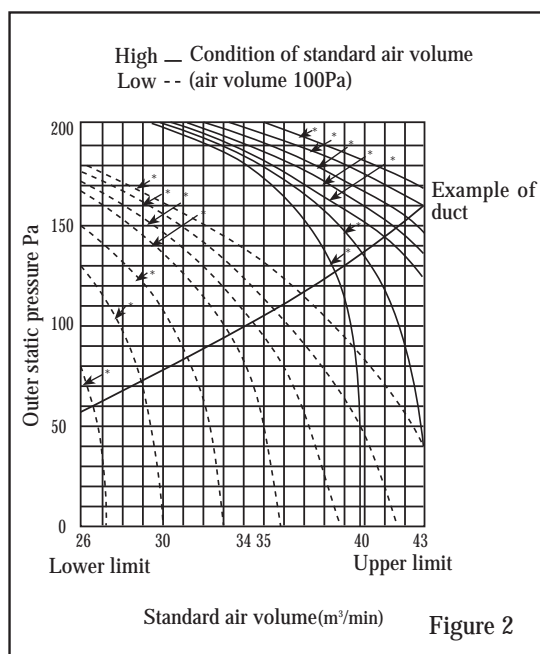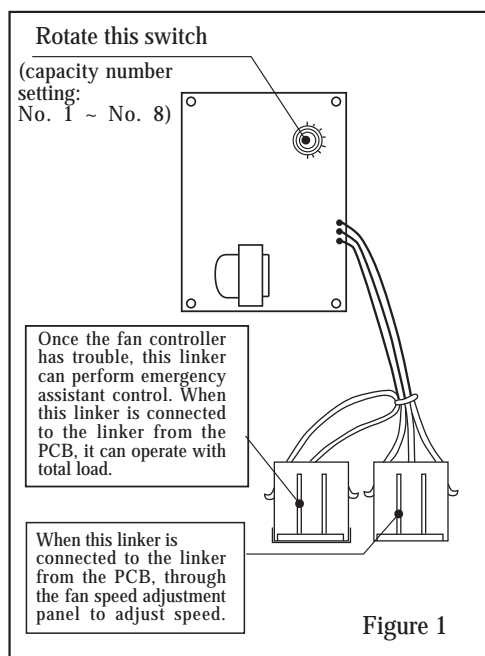

### ● The example of the method of choosing capacity number:


- 1) If the unit is in high-speed operation, needing take outer static pressure is 180Pa in capacity air volume 34m<sup>3</sup>/min as working condition point, according to Figure II  $\hat{\imath}$ The characteristic chart of air volume $\hat{\imath}$ , the capacity number of fan controller is No. 2.
- 2) If the unit is in low speed operation, needing take outer static pressure is 60Pa in capacity air volume 32m<sup>3</sup>/min as working condition point, according to Figure II  $\hat{\imath}$ The characteristic chart of air volume $\hat{\imath}$ , the capacity number of fan controller is No. 4.

# INSTALLATION MANUAL FOR INDOOR UNIT

## 11. Refrigerant pipe

[The air side pipe, liquid side pipe must be faithfully heat insulated, if no heat insulation, it may cause water leakage.]

- The outdoor unit has been charged with refrigerant.
- When connect the pipe to the unit or dismantling the pipe from the unit, please follow the figure shown, use spanner and torque spanner together.
- When connect cone nut, the inner side and outside of cone nut should paste with refrigerant oil. Use hand to twist 3-4 rings, then fasten with spanner.
- Referring to Table I to confirm the fasten torque. (too tight may damage nut leading to leakage)
- Check if the connection pipe leaks, then do heat insulation treatment, as below figure shown.
- Only use seal cushion to bind the joint part of air pipe and heat insulation parts.

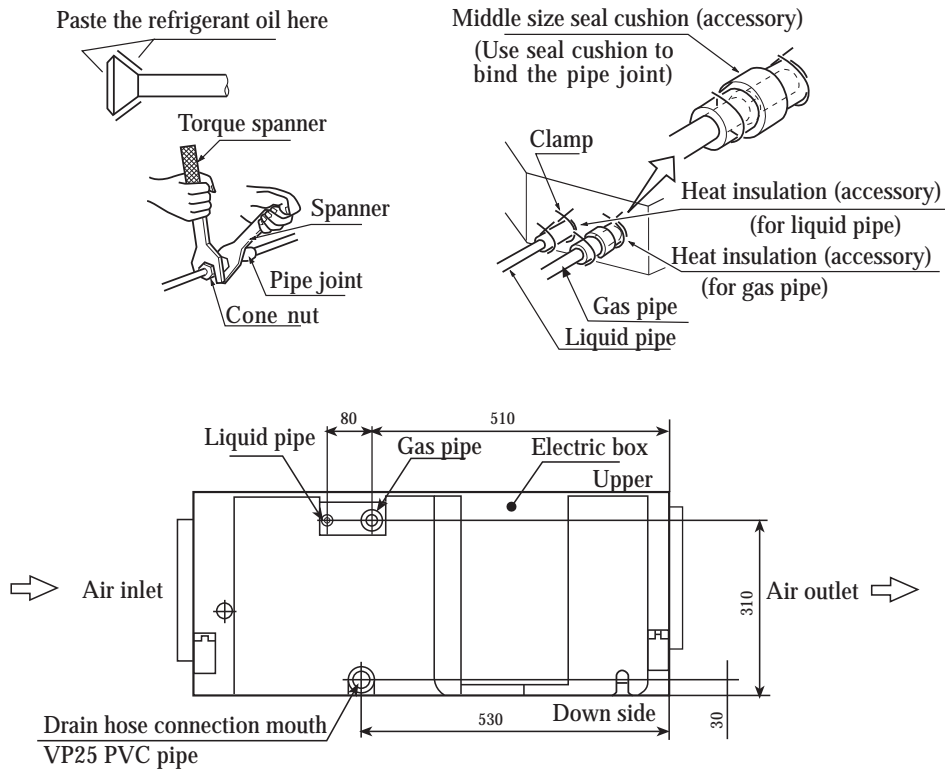

Specification of pipe (mm)	Tighten torque	Cone dimension A (mm)	Cone
$\phi$ 9.52	3270~3990 N·cm (333~407 kgf·cm)	12.0~12.4	
$\phi$ 15.88	9720~11860 N·cm (990~1210 kgf·cm)	22.9~23.3	

# OTHER INSTRUCTION AND TEST RUN


## Other instruction

### 1. Power supply

- The air conditioner must use a special power circuit. The user should provide by himself with special switch (25A~30A), grounding wire. The wiring should be done by a qualified electrician according to the wiring rules specified by national standard
- An creepage breaker should be installed.
- The grounding wire and null wire of the power cord should be strictly separated. It is incorrect to connect the null wire with grounding wire.

### 2. Cut and flaring method

Use pipe cutter to cut the pipe, the burrs must be removed.  
After inserting the flarer, perform flared nut.

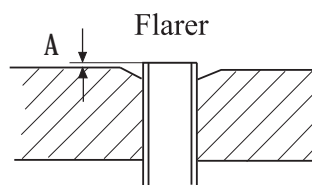

	Pipe diameter	Dimension A (mm)
Liquid pipe	$\phi$ 9.52mm (3/8")	1.0-1.2
Gas pipe	$\phi$ 19.05mm (3/4")	1.4-2.2
Gas pipe	$\phi$ 15.88mm (5/8")	1.4-2.2

Correct	Incorrect				
	Slant	Broken	Burrs	Uncompleted	Too long

## Test run

The following items must be noticed carefully during installation. After finishing installation, performing checking.

After installing the refrigerant pipe, drain hose and electric wire properly, perform test run to ensure the system not have trouble.

### Test run

- (1) Open the stop valve of gas pipe.
- (2) Open the stop valve of liquid pipe.
- (3) Press ON/OFF button to start operation, use wire controller to set to Cooling operation.
- (4) Confirm the function of the unit according this manual.