








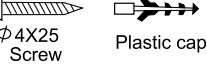




# Installation Manual of Room Air Conditioner

- Read this manual before installation.
- Explain sufficiently the operating means to the user according to this manual.


## Necessary Tools for Installation

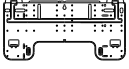- |                                  |                                   |  |                       |
|----------------------------------|-----------------------------------|--|-----------------------|
| 1. Driver                        | 5. Spanner (14,17,19, 27mm)       | 9. Knife   | 12. Measuring tape    |
| 2. Hacksaw                       | 6. Torque wrench (17mm,22mm,24mm) | 10. Nipper                                       | 13. Reamer            |
| 3. 60mm diameter hole core drill | 7. Pipe cutter                    | 11. Gas leak detector or soap-and-water solution | 14. Refrigeration oil |
| 4. Hexagon wrench (5mm)          | 8. Flaring tool                   |  |                       |

parts in same packing for indoor unit

No.	Accessory parts	Number of articles
①	Remote controller	2
②	 R-03 dry battery	4
③	 Mounting plate	2
④	 Remote controller holder	2
⑤	 Drain hose	2
⑥	 Pipe supporting plate	2
⑦	 $\phi$ 4X50 Steel nail, cement	12
⑧	 Connecting cable	2
⑨	 $\phi$ 4X25 Screw Plastic cap	8
⑩	 Cover	2
⑪	 Screw	4
⑫	 Drain-elbow	1
⑬	 Cushion	4



## Drawing for the installation of indoor and outdoor units

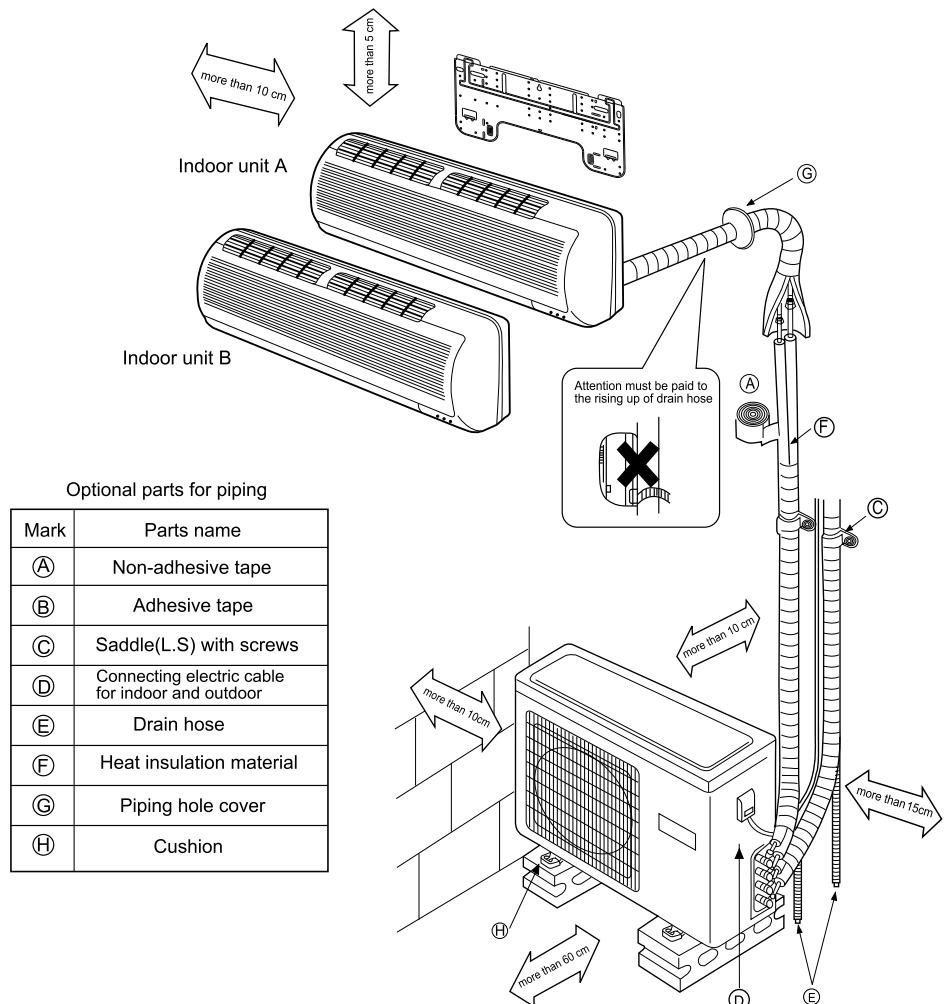

Optional parts for piping

Mark	Parts name
(A)	Non-adhesive tape
(B)	Adhesive tape
(C)	Saddle(L.S) with screws
(D)	Connecting electric cable for indoor and outdoor
(E)	Drain hose
(F)	Heat insulation material
(G)	Piping hole cover
(H)	Cushion

- ※ The marks from (A) to (G) in the figure are the parts' numbers
- ※ The distance between the indoor unit and the floor should be more than 2m

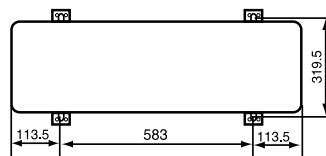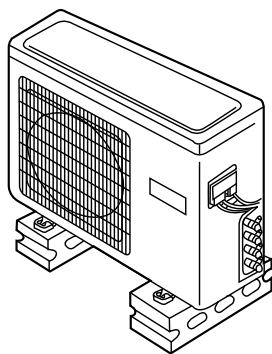

Floor fixing dimensions of the outdoor unit (Unit:mm)

### Fixing of outdoor unit

- Fix the unit to concrete or block with bolts ( $\phi 10\text{mm}$ ) and nuts firmly and horizontally.
- When fitting the unit to wall surface, roof or rooftop, fix a supporter surely with nails or wires in consideration of earthquake and strong wind.
- If vibration may affect the house, fix the unit by attaching a vibration-proof mat.

### Indoor Unit

## Selection of Installation Place

### Outdoor Unit

- Place, robust not causing vibration, where the body can be supported sufficiently.
- Place, not affected by heat or steam generated in the vicinity, where inlet and outlet of the unit are not disturbed.
- Place, possible to drain easily, where piping can be connected with the outdoor unit.
- Place, where cold air can be spread in a room entirely.
- Place, nearby a power receptacle, with enough space around. (Refer to drawings).
- Place where the distance of more than 1m from televisions, radios, wireless apparatuses and fluorescent lamps can be left.
- In the case of fixing the remote controller on a wall, place where the indoor unit can receive signals when the fluorescent lamps in the room are lightened.
- Place, which is less affected by rain or direct sunlight and is sufficiently ventilated.
- Place, possible to bear the unit, where vibration and noise are not increased.
- Place, where discharged wind and noise do not cause a nuisance to the neighbors.
- Place, where a distance marked  $\leftrightarrow$  is available as illustrated in the above figure.
- Height diff between indoor and outdoor units should be kept within 5 meters.
- Place where the distance of more than 3 meters from antenna of TV set or radio telegraphy is available.

## Power Source

- Before inserting power plug into receptacle, check the voltage without fail. The power source is the same as the corresponded name plate.
- Install an exclusive branch circuit of the power.
- A receptacle shall be set up in a distance where the power cable can be reached. Do not extend the cable by cutting it.

## Selection of Pipe

- To this unit, both liquid and gas pipes shall be insulated as they become low temperature in operation.
- Piping length: Total length of piping less than 20 meters with A, B unit less than 15 meters on individual unit.


Piping size	Liquid pipe ( $\phi$ )	6.35mm (1/4")
	Gas pipe ( $\phi$ )	12.7mm(1/2")

# Indoor Unit

## 1 Fitting of the Mounting Plate and Positioning of the Wall Hole

### When the mounting plate is first fixed

- 1 Carry out, based on the neighboring pillars or lintels, a proper leveling for the plate to be fixed against the wall, then temporarily fasten the plate with one steel nail.
- 2 Make sure once more the proper level of the plate, by hanging a thread with a weight from the central top of the plate, then fasten securely the plate with the attachment steel nail.
- 3 Find the wall hole location A using a measuring tape.

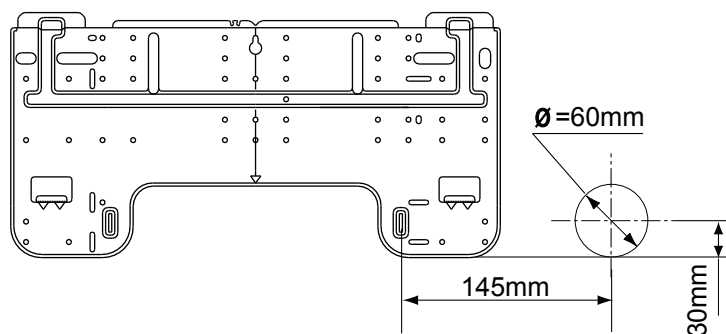


### When the mounting plate is fixed to side bar and lintel

- Fix to side bar and lintel a mounting bar, which is separately sold, and then fasten the plate to the fixed mounting bar.
- Refer to the previous article, "When the mounting plate is first fixed", for the position of wall hole.

## 2 Making a Hole on the Wall and Fitting the Piping Hole Cover

- Make a hole of 60mm in diameter, slightly descending to outside the wall.
- Install piping hole cover and seal it off with putty after installation.

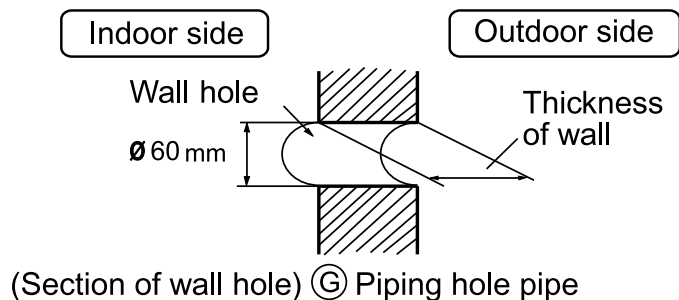

# Indoor Unit

## 3 Installation of the Indoor Unit



### Drawing of pipe

#### [ Rear piping ]

- Draw pipes and the drain hose, then fasten them with the adhesive tape.

#### [ Left • Left-rear piping ]

- In case of left side piping, cut away, with a nipper, the lid for left piping.
- In case of left-rear piping, bend the pipes according to the piping direction to the mark of hole for left-rear piping which is marked on heat insulation materials.
  1. Insert the drain hose into the dent of heat insulation materials of indoor unit.
  2. Insert the indoor/outdoor electric cable from backside of indoor unit, and pull it out on the front side, then connect them.
  3. Coat the flaring seal face with refrigerant oil and connect pipes.  
Cover the connection part with heat insulation materials closely, and make sure fixing with adhesive tape.

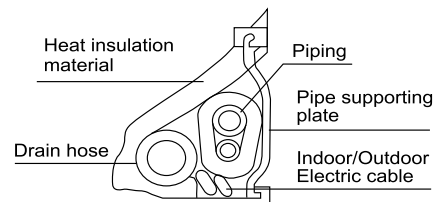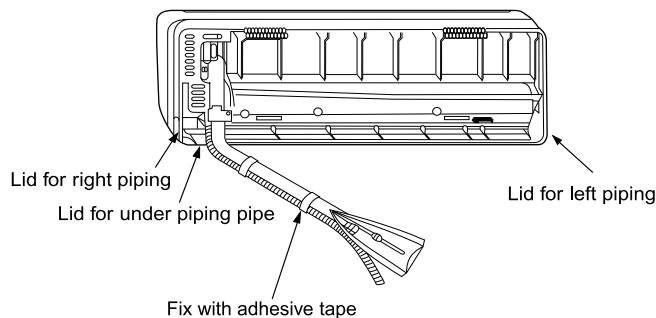


- Indoor/outdoor electric cable and drain hose must be bound with refrigerant piping by protecting tape.

#### [ Other direction piping ]

- Cut away, with a nipper, the lid for piping according to the piping direction and then bend the pipe according to the position of wall hole. When bending, be careful not to crash pipes.
- Connect beforehand the indoor/outdoor electric cable, and then pull out the connected to the heat insulation of connecting part specially.

### Fixing the indoor unit body

- Hang surely the unit body onto the upper notches of the mounting plate. Move the body from side to side to verify its secure fixing.
- In order to fix the body onto the mounting plate, hold up the body aslant from the underside and then put it down perpendicularly.

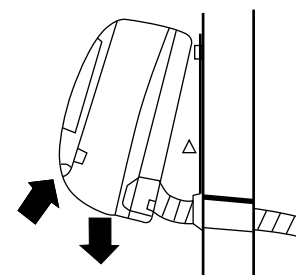


## 4 Connecting the indoor/outdoor Electric Cable

### [Cautions]

1. Make sure it is unit A or unit B, when make wiring.
2. Unit to be connected to stop valve A on outdoor unit is unit A, while the one to be connected to stop valve B is unit B.
3. Refer to wiring diagram.

### Removing the wiring cover

- Remove terminal cover at right bottom corner of indoor unit, then take off wiring cover by removing its screws.

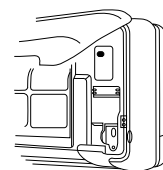

# Indoor Unit

## When connecting the cable after installing the indoor unit

1. Insert from outside the room cable into left side of the wall hole, in which the pipe has already existed.
2. Pull out the cable on the front side, and connect the cable making a loop.



## When connecting the cable before installing the indoor unit

- Insert the cable from the back side of the unit, then pull it out on the front side.
- Loosen the screws and insert the cable ends fully into terminal block, then tighten the screws.
- Pull the cable slightly to make sure the cables have been properly inserted and tightened.
- After the cable connection, never fail to fasten the connected cable with the wiring cover.

Note: When connecting the cable, confirm the terminal number of indoor and outdoor units carefully.

If wiring is not correct, proper operation can not be carried out and will cause defect.

1. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person. The type of connecting wire is H05RN-F or H07RN-F.
2. If the fuse on PC board is broken please change it with the type of T.3.15A/250V.
3. The wiring method should be in line with the local wiring standard.
4. After installation, the power plug should be easily reached.

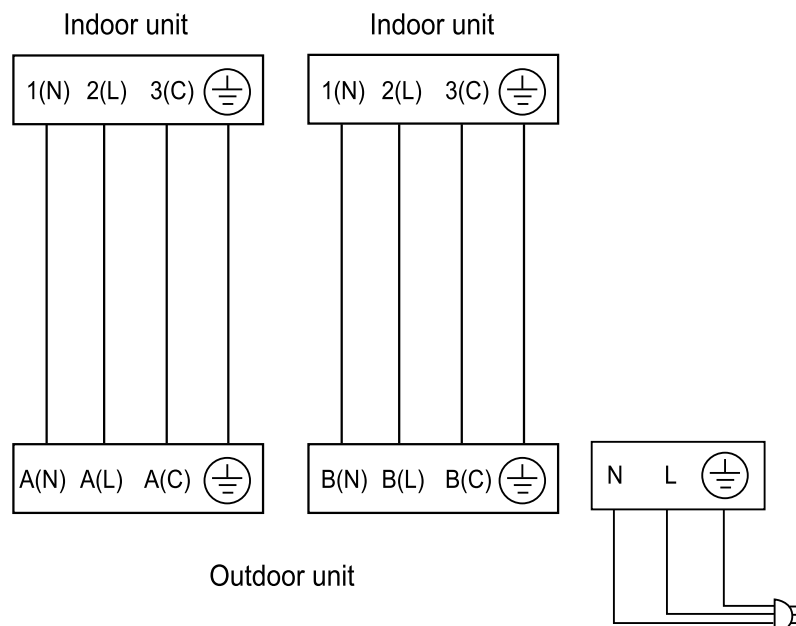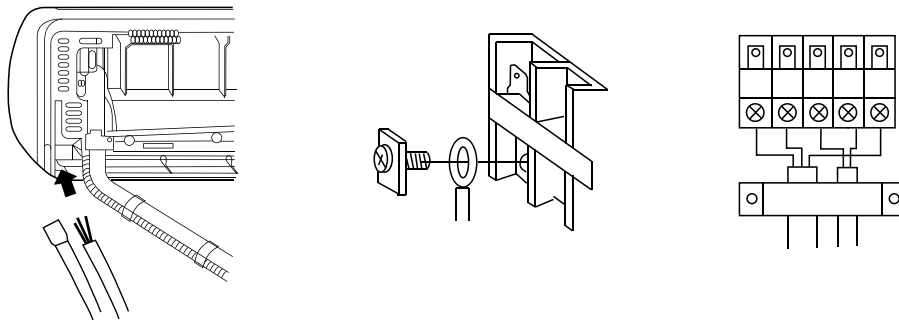


# Outdoor Unit

## 1 Installation of Outdoor Unit

Install according to **Drawing for the installation of indoor and outdoor units**

## 2 Connection of Pipes

- To bend a pipe, give the roundness as large as possible not to crush the pipe.
- Connecting the pipe of gas side first makes working easier.
- The outdoor unit has two individual refrigeration systems(A and B), each refrigeration system has one compressor. The max length of connection pipe of each system is 5m.

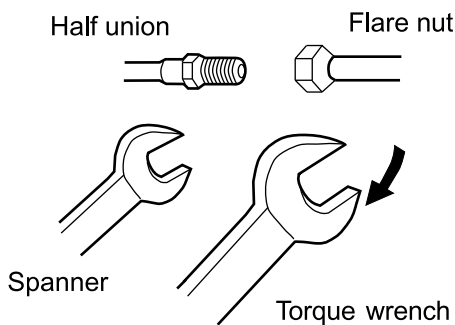

Forced fastening without careful centering may damage the threads and cause a leakage of gas.

Pipe Diameter ( $\phi$ )	Fastening Torque
Liquid Side 6.35mm(1/4")	18N.m
Gas Side 12.7mm(1/2")	50N.m

**Be careful that foreign matters, such as wastes of sands, etc. shall not enter the pipe. The standard pipe length of each system is 5m. adding refrigerant is needed, and each time adding a meter needs adding 20g of refrigerant.**


## 3 Connection

- Use the same method on indoor unit. Loosen the screws on terminal block and insert the plugs fully into terminal block, then tighten the screws.
- Insert the cable according to terminal number in the same manner as the indoor unit.
- If wiring is not correct, proper operation can not be carried out and controller may be damaged.
- Fix the cable with a damp.

## 4 Attaching Drain-Elbow

- If the drain-elbow is used, please attach it as figure.


Note: Only for heat pump unit.

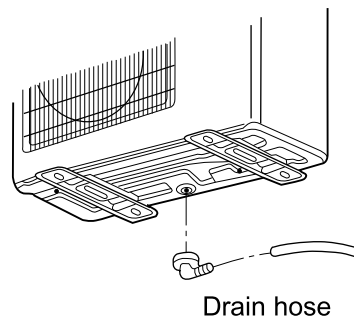

# Outdoor Unit

## 3 Connection

- Loosen the screws on terminal block and insert the plugs fully into terminal block, then tighten the screws.
- Insert the cable according to terminal number in a same manner as the indoor unit.
- If wiring is not correct, proper operation can not be carried out and controller may be damaged.
- Use the same method on indoor unit, insert signal wire into respective socket.
- Fix the cable with a clamp.

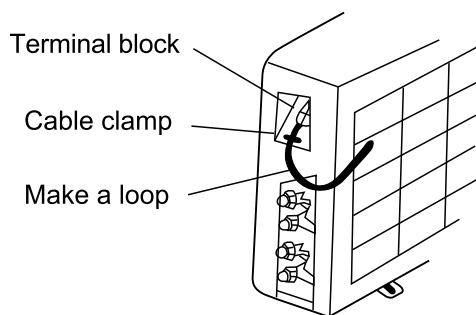

## 4 Purging Method

- Air purge.  
Carry out the air purge of the indoor unit and refrigerant piping by vacuuming.
- When total piping length exceeds 10m, 16g additional refrigerant shall be added to every one exceeding meter.

Piping length	<10m	15m	20m
Additional amount	No need	80g	160g


- Brand new outdoor unit is charge 120g more refrigerant than regulated weight.  
Only for first installation, this extra 120g can be used to purge air in the pipe.  
(keep the angle 90° and time strictly.)
- Air purging must be finished within 10 min, turning on the power, could it failed, purging again. During air purging, do not run indoor unit.

## 1 Power Source Installation


- The power source must be exclusively used for air conditioner. (Over 10A)
- In the case of installing an air conditioner in a moist place. please install an earth leakage breaker.
- For installation in other places, use a circuit breaker as far as possible.

## 2 Cutting and Flaring Work of Piping

- Pipe cutting is carried out with a pipe cutter and burs must be removed.
- After inserting the flare nut, flaring work is carried out.

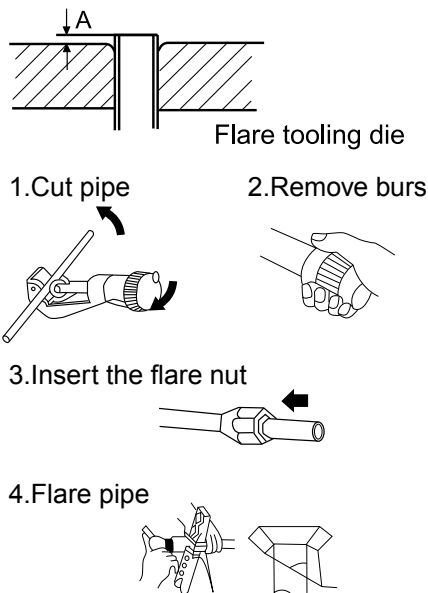


Pipe diameter	Size A (mm)	
	clutch Standard	British Standard
6.35mm(1/4")	0~0.5	0.8~1.5
12.7mm(1/2")	0~0.5	1.2~2.0

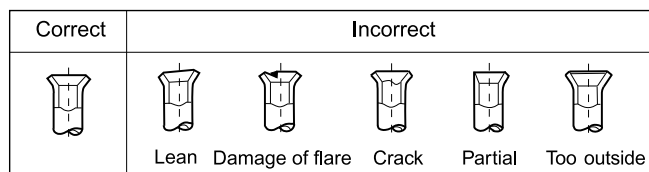

## 3 On Drainage

- Please install the drain hose so as to be downward slope without fail.
- Please don't do the drainage as shown below.

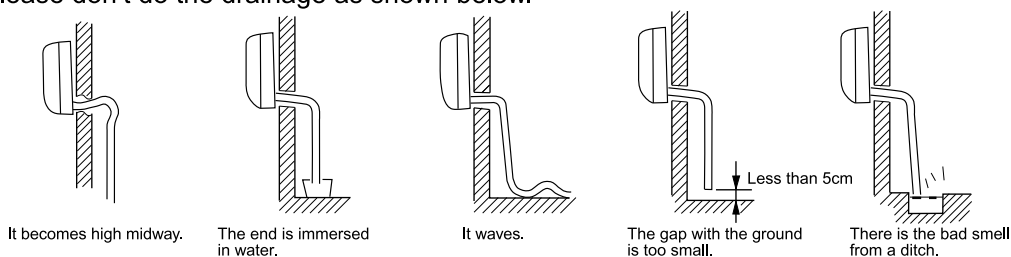

- Please pour water in the drain pan of the indoor unit, and confirm that drainage is carried out surely to outdoor.
- In case that the attached drain hose is in a room, please apply heat insulation to it without fail.

## Check for Installation and Test Run

- Please kindly explain to our customers how to operate through the instruction manual.

### Check Items for Test Run

- Put check mark ✓ in boxes
- |  |  |  |
|--|--|--|
| <input type="checkbox"/> Gas leak from pipe connecting?  | <input type="checkbox"/> Is drainage securely carried out?           | <input type="checkbox"/> Is the lamp normally lighting?                                  |
| <input type="checkbox"/> Heat insulation of pipe connecting?   | <input type="checkbox"/> Is the earth line securely connected?       | <input type="checkbox"/> Are cooling and heating (when in heat pump) performed normally? |
| <input type="checkbox"/> Are the connecting wirings of indoor and outdoor firmly inserted to the terminal block? | <input type="checkbox"/> Is the indoor unit securely fixed?          | <input type="checkbox"/> Is the operation of room temperature regulator normal?          |
| <input type="checkbox"/> Is the connecting wiring of indoor and outdoor firmly fixed?                            | <input type="checkbox"/> Is power source voltage abided by the code? |  |
|  | <input type="checkbox"/> Is there any noise?                         |  |